



## Quick Start Guide

Version: 1.5.12

Edition: April 29th 2025

# Table of Contents

<b>Welcome</b>	<b>5</b>
Marginal Notes	5
<b>Important Safety Instructions</b>	<b>7</b>
Defective Parts/Modules	8
First Aid (in the case of electric shock)	8
Electromagnetic Compatibility	8
<b>Overview</b>	<b>9</b>
The BLADE//runner Hardware Suite	10
Blade Front Panel	13
Frame Front Panel	14
Frame Rear Panel	14
<b>Installation &amp; Configuration</b>	<b>19</b>
Important notes	19
Environmental Data	20
Computer System Requirements	22
Installation Checklist	22
QSFP28 Module Installation	23
Frame Installation	23
Blade Installation	23
Air Guides	23
Grounding & Power	29
Powering On	30
Network Connection	31
PC IP Configuration	32
Web Browser Control	35
Troubleshooting the Connection	35
Next Steps	36
<b>Security</b>	<b>37</b>
SSH Login	37

Access Control and User Authentication .....	37
<b>Operation/Monitoring (Web Browser Control) .....</b>	<b>41</b>
Operating Principles .....	41
Manual Configuration .....	48
Software Update .....	51
Concepts .....	54
<b>Tools .....</b>	<b>55</b>
Vscript API <b>V//api</b> .....	55
<b>Techdata and Appendices .....</b>	<b>61</b>
IPGR Datasheet .....	62
SNMP MIB File .....	62
Declaration of Conformity .....	62



# Welcome

Welcome to **BLADE//runner**, arkona's software-defined IP Core Routing & Processing Platform.

This documentation is designed for users and technicians, and covers installation and basic operation principles.

For more information and regular product updates, please register at [www.arkonatech.com](http://www.arkonatech.com).



## Marginal Notes

The following symbols are used to draw your attention to:

Points of clarification

Useful tips and short cuts.

Warnings - alert you when an action should always be observed

Recommendations for action