



PrintMate AS

Operator Guide

A83810100 Issue 6 November 2020

Product codes:

A83800001, A83800001E

A83800002, A83800002E

A83800003, A83800003E

Our mission is to improve lives by enhancing cancer diagnostics.

To every one of us at EpreDia, this mission is personal. Many of us have loved ones and family who have been affected by cancer.

You are on the front line of this fight, and our pledge is to arm you with the most innovative tools to enable early detection and diagnosis of this disease.

Learn more at epredia.com



Company Information

© Copyright 2020. EpreDia. All rights reserved.

EpreDia makes every attempt to ensure that the information contained in this supporting document is correct and clearly stated but does not accept responsibility for any errors or omissions. The development of EpreDia products and services is an ongoing process. Please ensure that any published information you use as a reference is up to date and relates to the condition of the product. If necessary, check with your local EpreDia representative.

This document may not, in whole or in part, be copied, photocopied, reproduced, translated, or converted to any electronic or other form without prior written consent of EpreDia. All information contained in this manual is proprietary and confidential, and the exclusive property of EpreDia and is protected by copyright.

Contact address



Shandon Diagnostics Limited, a subsidiary of EpreDia
Tudor Road, Manor Park, Runcorn
Cheshire, WA7 1TA, UK

Tel: +44 (0) 1928 534000

Fax: +44 (0) 1928 534001

Web: www.epredia.com

USA Distributor

Richard-Allan Scientific, a subsidiary of EpreDia
4481 Campus Drive
Kalamazoo, MI 49008, USA

Tel: 1-800-522-7270

Fax: +1 269-372-2674

Web: www.epredia.com



These instruments conform to the essential requirements of:

- EMC Diagnostic Directive 2014/30/EU
- Machinery Directive 2006/42/EC

Symbols

The following symbols and conventions may be used throughout this document and on the instrument:



This symbol is used on the equipment, or in a document, to indicate that instructions must be followed for safe and correct operation.

This symbol is also used on the instrument, or in a document, to indicate that irritants or potentially harmful chemicals are present. Refer to the Material Safety Data Sheets for the products, and always use Good Laboratory Practice.

If this symbol appears on the instrument always refer to the operator guide.



This symbol indicates that a surface is hot. If this symbol appears on the instrument or in the documentation always refer to the operator guide. Take suitable precautions.



This symbol is utilised on the instrument, or in a document, to indicate that there are potential biological risks associated with the instrument and / or with instrument use. Always use Good Laboratory Practice.



Manufacturer

A warning is given in the documentation if there is a danger of personal injury or damage to equipment or samples.

Note

Notes give additional information about a job or instruction, but do not form part of the instruction.

Contents

Company Information	3	Chapter 4 - Troubleshooting	35
Symbols	3	Carousel Error	36
Contact address	3	Fail to Detect Cassette	37
USA Distributor	3	'Hopper Empty' Warning Displayed When Not Empty	38
Contents	4	Dispense Error	39
Safety Information	5	Dispense Lever Fails to Reset	40
Introduction	5	Conveyor Error	40
General Safety	5	Output Error	41
Environment	6	Output Drum Error	41
Warranty Statement	6	Loud Knocking Noise on Power-Up	42
How to Use this Guide	7	Instrument not Responding	42
Introduction	7	Computer not Responding	43
The PrintMate AS Product Range	8	Tape Errors	43
Chapter 1 - Introducing PrintMate AS	9	Poor Print Quality	44
Identification of Parts	10	No Print	44
System Interaction	14	Part of Print is Missing	45
System Specification	14	Lower Line of Print is Misaligned	46
Chapter 2 - Installation and Setup	15	Print is Faint	47
Installation and Setup	15	Print Rubs Off Cassette Easily	48
Setting up PrintMate AS	16	Barcodes will not Scan	49
Connecting the Output Chutes	20	Print contains Incorrect Information	49
Changing the COM Port Settings	22	Chapter 5 - Cleaning and Maintenance	51
Chapter 3 - Basic Operation	25	Cleaning and Maintenance	51
Basic Operation	25	Appendices	53
Hopper Types	26	Appendix A - Spares and Accessories	53
Loading procedure	26	Appendix B - Repacking Instructions	54
Changing the Foil Tape	31	Appendix C - Approved Cassette List	55
Using the Touch Panel	34	Index	56

Safety Information

Introduction

Epredia instruments are designed for convenient and reliable service; however, improper use or handling by a user may damage the instrument or cause a hazard to health. The instrument must not be used in a manner not specified by Epredia. Correct maintenance procedures are essential for consistent performance. It is recommended that users secure a maintenance contract with our service department.

To remain compliant with regulatory requirements, and to ensure that mandatory safety upgrades are performed at the earliest opportunity, it is strongly recommended that all service activities are performed by Epredia-factory trained Engineers. Warranty may be voided if service is performed by non-factory trained Engineers.

Maintenance or repairs that are not performed by Epredia trained Engineers with proven training may affect the safety, performance and compliance of the equipment.

Please consult your local sales or support teams for more information about service contracts.



The following sections contain important information for the safe setup and use of the instrument and should be read and understood by the user before using the instrument.

General Safety



- This instrument, as supplied, conforms to IEC 61010-1; however, the addition of chemicals introduces potential hazards. Good Laboratory Practice must be employed and consideration must be given to the potential for hazard when dealing with these chemicals.



- This instrument has been designed and tested to be used in a basic electromagnetic environment as defined by BS EN 61326-1:2013.
- Do not use the instrument in close proximity to strong electromagnetic radiation, as these may interfere with the proper operation. The electromagnetic environment should be evaluated prior to operation of the device.



- Do not introduce any source of ignition into, or near, the instrument once it has been loaded with reagents.
- Do not remove any panels or access covers, unless specifically instructed to do so. The instrument does not have any user serviceable parts. Potentially lethal voltages are present inside the instrument.
- The instrument must be properly connected to a good earth (ground) via the Mains input supply and positioned such that it is possible to interrupt the Mains supply at the source by removing the plug from the socket.
- Use only factory approved accessories or replacement parts within the instrument.
- Only use reagents recommended in the operator guide.
- Position the instrument such that it is possible to interrupt the Mains supply at the source by removing the plug from the socket.
- If the equipment is used in a manner not specified by Epredia, the protection offered by the equipment may be impaired.

Environment

This instrument is required to comply with the European Union's Waste Electrical and Electronic Equipment (WEEE) Directive 2012/19/EU. It is marked with the following symbol:



Epredia has contracts with one or more recycling / disposal companies in each EU Member State, and this product and packaging should be disposed of or recycled through them. For further information contact your Epredia service representative.

Warranty Statement

Epredia is proud of their quality, reliability and of our after-sales service. We continuously strive to improve our service to our customers.

Please ask your distributor or Epredia representative about service contracts which can help maintain your instrument in an optimal operating condition.

Warranty provisions necessarily vary to comply with differences in national and regional legislation. Specific details can be found in the delivery documentation or from your dealer or representative.

Please note that your warranty may be invalidated if:

- This instrument is modified in any way, or not used as intended by Epredia.
- Accessories and reagents which have not been approved by Epredia are used.
- The instrument is not operated or maintained in accordance with instructions.
- The installation of the instrument was not conducted by a certified Epredia representative.

How to Use this Guide

Introduction

The EpreDia PrintMate AS is a high-speed cassette labelling instrument designed for use in laboratories by operators familiar with cassette labelling techniques and laboratory equipment.

Before operating PrintMate AS, users should have read and understood the [Safety Information](#) as well as the LabWriter Operator Guide (A82810105).

Chapter 1 - Introduction to PrintMate AS

This chapter gives a tour of the instrument and its features. It describes the different parts of the instrument and gives general information with regards to interfacing with the PrintMate AS.

Chapter 2 - Installation and Setup

This chapter is a step-by-step guide to installing and setting up PrintMate AS and its accessories.

Chapter 3 - Basic Operation

This chapter explains the basic operating techniques required to perform routine tasks and use PrintMate AS on a day-to-day basis.

Chapter 4 - Troubleshooting


This chapter is intended to help operators identify and cure common faults.

Chapter 5 - Cleaning and Maintenance


This chapter lists the cleaning schedules which should be followed to ensure safe and reliable operation.

The PrintMate AS Product Range


The PrintMate AS product range consists of 3 different models with varying cassette capacity.

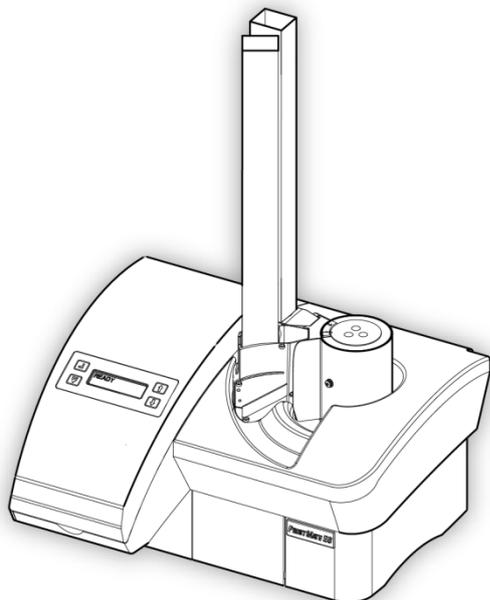

Eprelia PrintMate AS 150

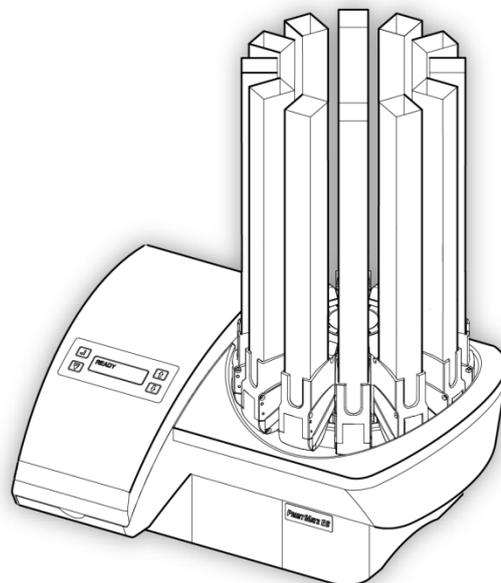

Eprelia PrintMate AS 900

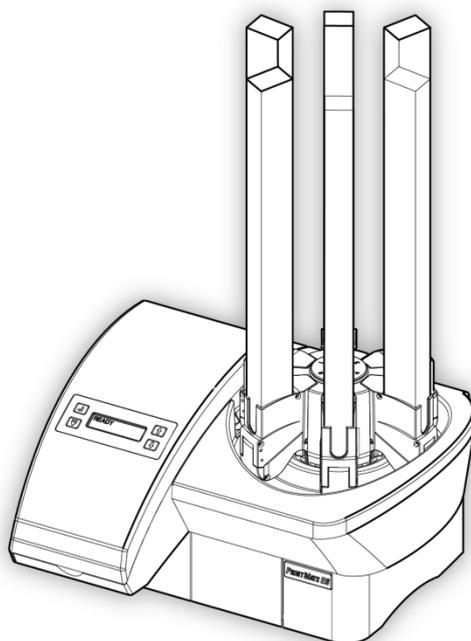

Eprelia PrintMate AS 450

The methods of operation for each of these instruments are identical.


Chapter 1 - Introducing PrintMate AS

- [Identification of Parts](#)
- [System Interaction](#)
- [System Specification](#)

Identification of Parts


The following diagrams identify the different components of PrintMate AS.

PrintMate AS with doors closed

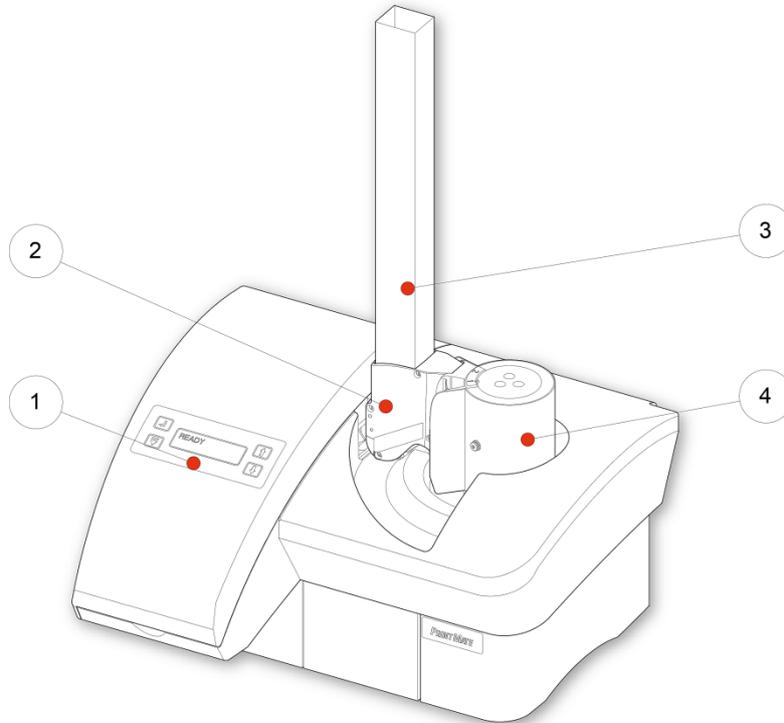


Item	Description
1	Touch Panel and Display
2	Cassette Hopper
3	Cassette Tube
4	Carousel

PrintMate AS with doors open

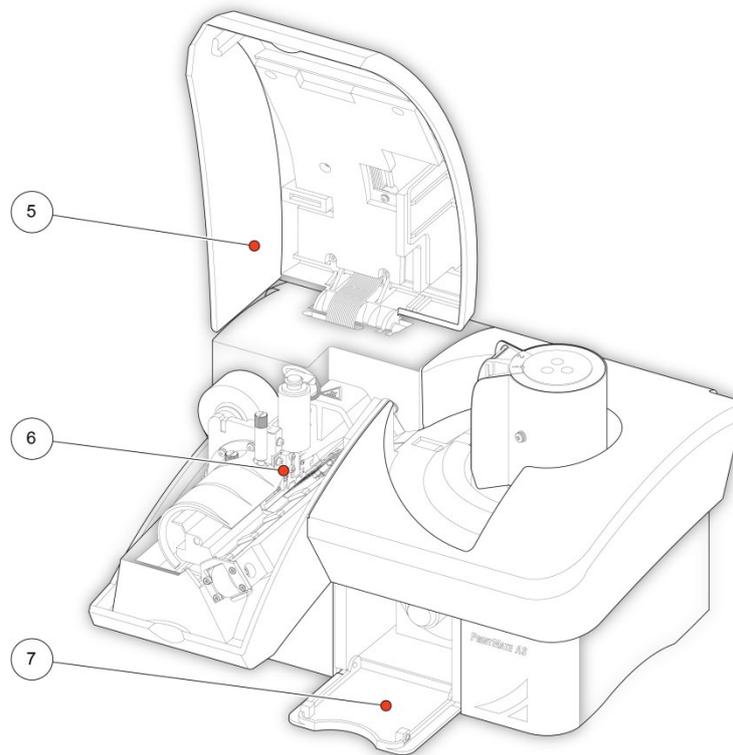


Item	Description
5	Print Door
6	Print Head
7	Waste Spool Access

PrintMate AS external connections

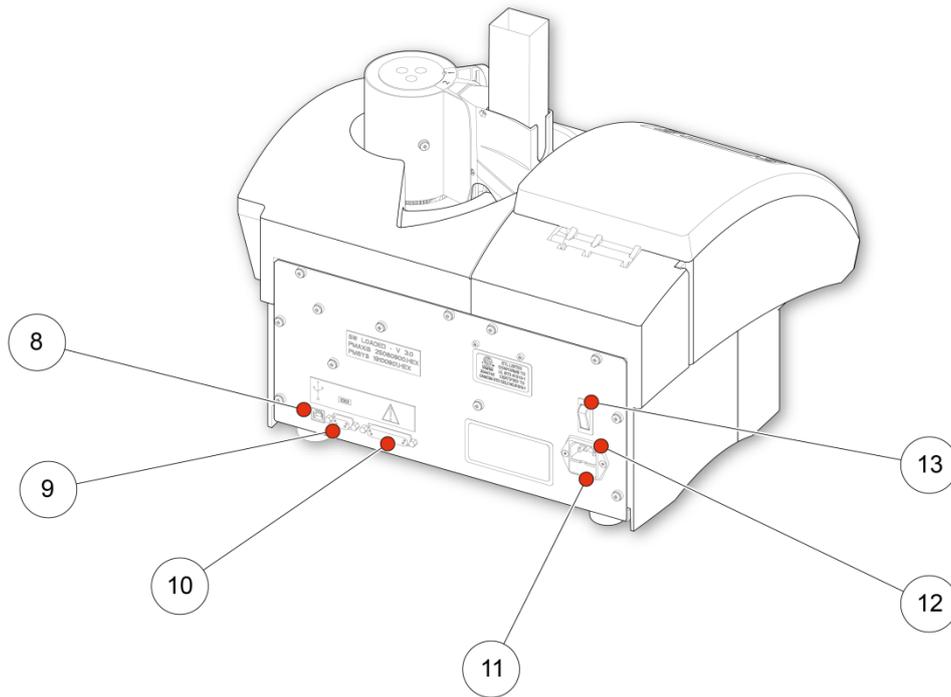

Item	Description
8	USB Connection
9	9-Pin Serial Port
10	Collection System Connector
11	Fuse
12	Power Connector
13	Power Switch

PrintMate AS Print Head

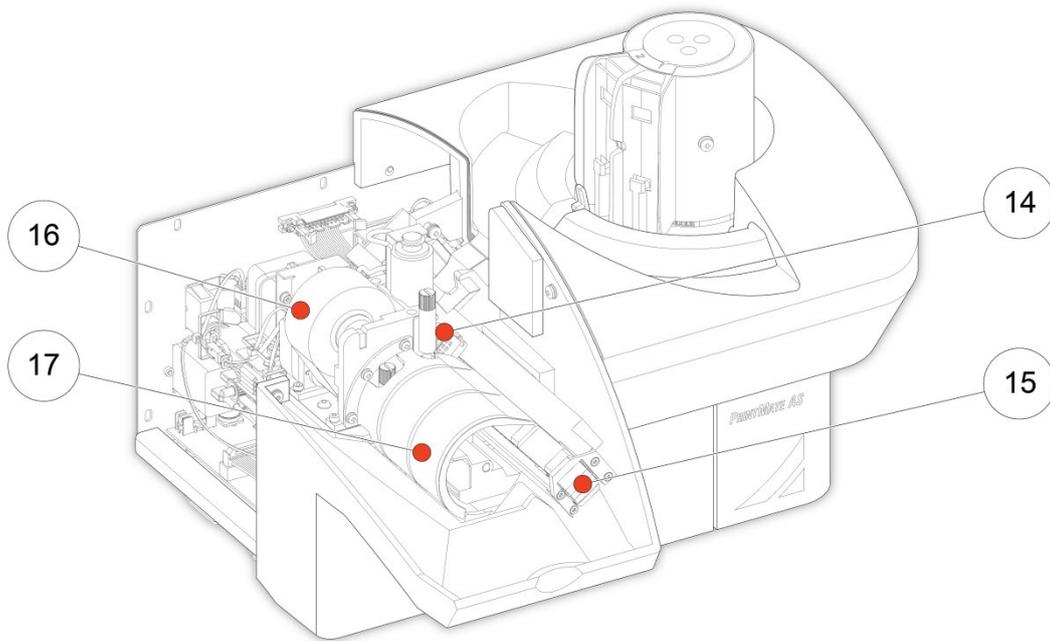

Item	Description
14	Cassette Clamp
15	Conveyor Belt
16	Hot Foil Tape
17	Output Drum

System Interaction

The two methods of interacting with PrintMate AS are:

- Using the LabWriter Application provided with the instrument as explained in the LabWriter Application Operator Guide (A82810105).
- Using the Touch Panel on the instrument - *see Chapter 2 - [Using the Touch Panel](#)*.

System Specification

Mechanical Specification

Height	810 mm (with cassette tubes) / 290 mm (without cassette tubes)
Width	435 mm
Depth	380 mm
Weight	17 kg (with cassette tubes)

Electrical Specification

Voltage	100-120 V~ / 220-240 V~
Frequency	50 / 60 Hz
Power	220VA (750 BTU/h)
Earth Leakage	(Up to 220 V) (<3500 μ A, > 220 V)
Fuses	T2A H250V (2 off)

Environmental Specification

Warning - For indoor use only	
Temperature (Operating Limits)	+5°C to +40°C (+41°F to +104°F)
Temperature (Recommended Operation)	+15°C to +30°C (+59°F to +86°F) Note <i>Performance may deteriorate when operated outside of this range</i>
Temperature (Storage)	-25°C to +55°C (-13°F to +131°F) / +70°C (+158°F) for short exposure
Relative Humidity	Max. 80% RH up to 31°C, decreasing linearly to 50% RH at 40°C
Altitude	Up to 2,000 m (6,500 ft)
Pollution Degree	2
Over Voltage Category	II

Chapter 2 - Installation and Setup

Installation and Setup

- [Setting up PrintMate AS](#)
- [Connecting the Output Chutes](#)
- [Changing the COM Port Settings](#)


Setting up PrintMate AS

- [Unpacking](#)
- [Locating the PrintMate AS](#)
- [Setting up the Electrical Connections](#)


Unpacking

To unpack PrintMate AS:


- Remove uppermost foam piece.

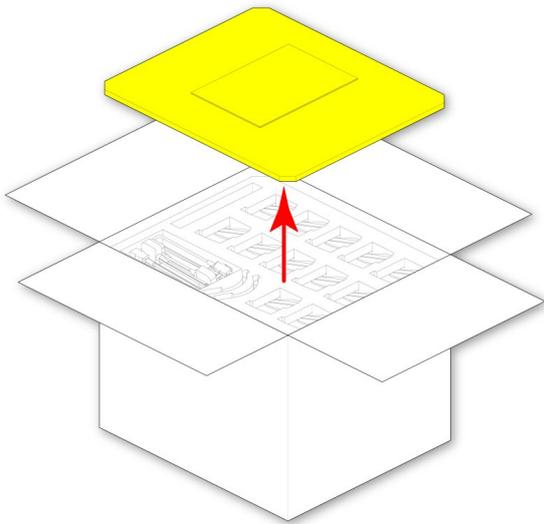


- Remove the Leads, Hoppers and Output Chute pieces.

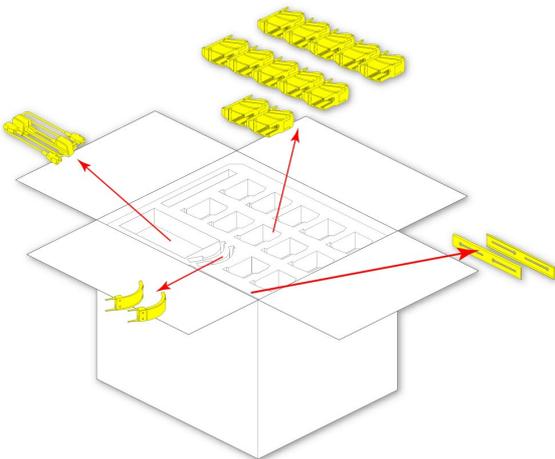


- Remove the foam tray.

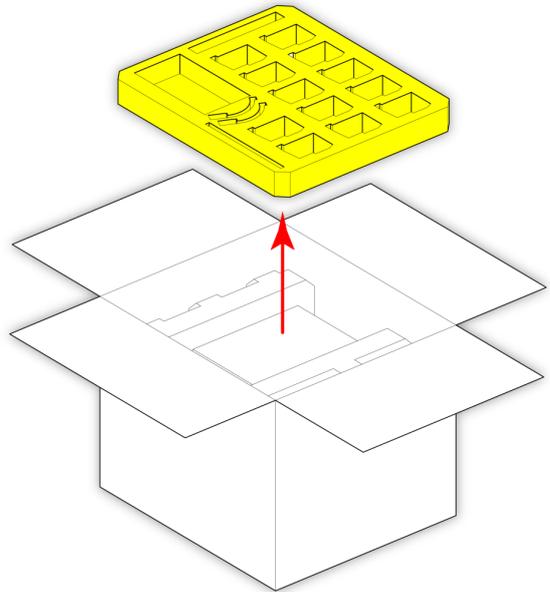


- Remove the foam base mat and the operator pack.

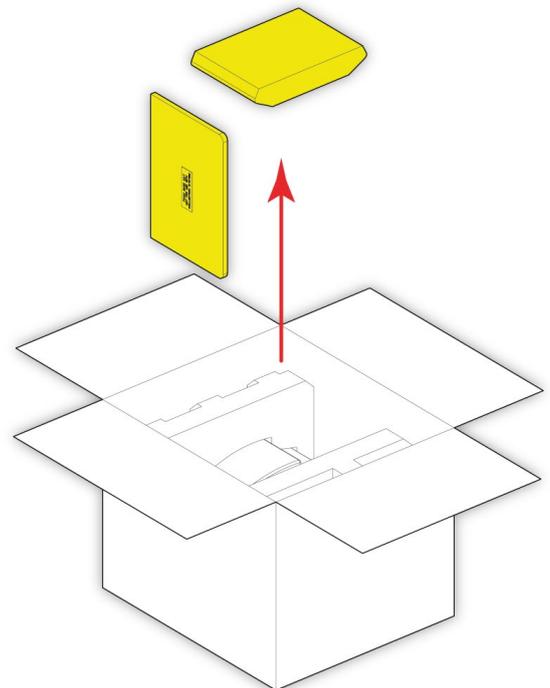

- Lift out the PrintMate AS and the surrounding foam pieces and place onto a suitable level surface.

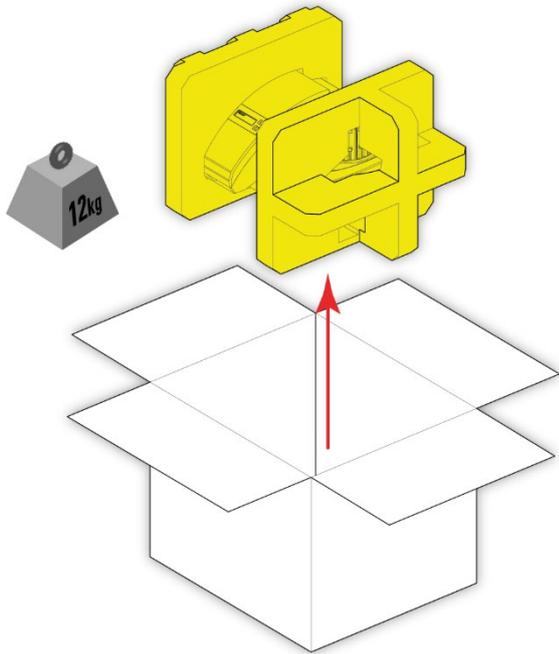


- Open the Print Door and unscrew the transit lock lever from the locked position and return to the stored position.

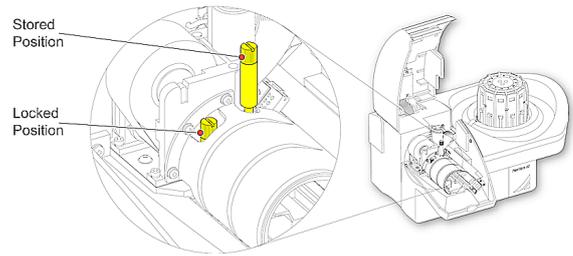

PrintMate AS weighs approximately 12 kg (26 lbs), and help may be required to ensure safe lifting.

- Taking care not to let the unit fall, remove the remaining foam pieces.


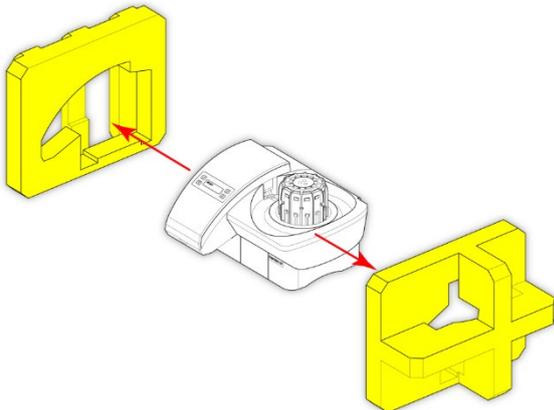


Locating PrintMate AS



PrintMate AS must be located on a level surface capable of supporting the weight of the instrument and the PC.

PrintMate should be positioned so that it has a minimum of 100 mm (4 in) gap on all sides, as well as sufficient space above it to allow Hoppers and Cassette Tubes to be connected and removed.

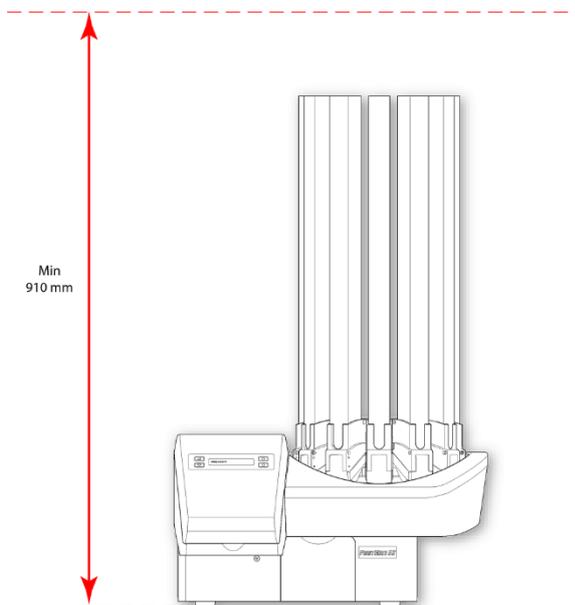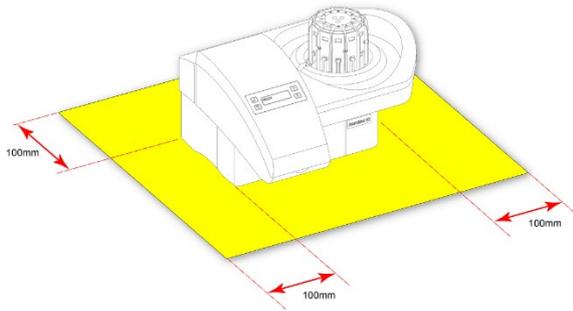

PrintMate AS should be located close enough to the connected PC to ensure that connection wires are not strained.


Electrical Connections and Start-up Procedure

Note

The following instructions assume that the LabWriter Application has been pre-installed. If this is not the case refer to the LabWriter Operator Guide (A82810105) Chapter 1 - Installing the Software.

The PC and PrintMate should be connected as follows:

- Set up the PC as described in the manufacturers' instructions.
- Position the instrument such that it is possible to interrupt the Mains supply at the source by removing the plug from the socket.
- Ensure the Power Switch on PrintMate is set to the Off (O) position.
- Connect the Power Lead to the Power Connector and then plug it in to a suitably rated Mains Power Supply.
- The length of the Mains Cord should not be greater than 3m.
- This instrument is supplied with power cables suitable for the UK, the USA, France and Germany. If an alternative plug is required, a technically-competent person must remove the moulded plug and replace it with a suitably rated, fused plug.

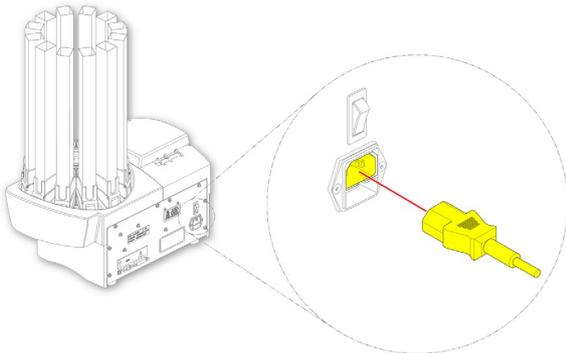


- Power up the PC so that the Windows Desktop is shown.
- Ensure the LabWriter Application is correctly installed onto the PC.




Do not run the LabWriter Application yet.

- Turn on PrintMate and wait until the Touch Panel Display reads **PrintMate Ready**.
- Connect the USB (Type A) Connector to the PC.

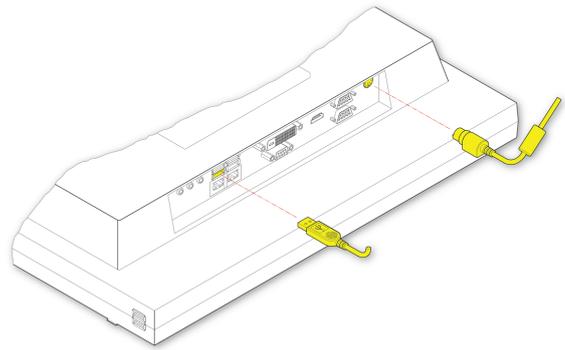


- Connect the USB (Type B) Connector to the back of PrintMate.

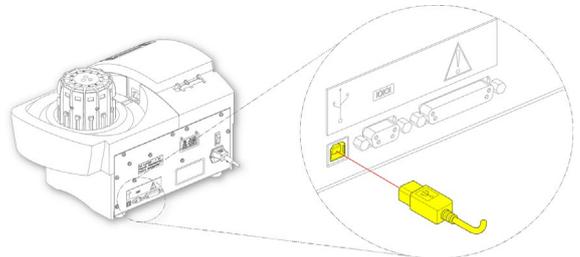



- The PC should emit a chime and indicate that it has found a USB device.
- The LabWriter Application should now be able to be run and setup in accordance with the instructions given in the LabWriter Application Operator Guide (A82810105).
- PrintMate AS operates at a faster Baud Rate than PrintMate, refer to [Changing the COM Port Settings section](#).

Connecting the Output Chutes

The PrintMate AS Chutes included with PrintMate AS fit on either (or both) of the two inner output positions (Outputs 1 and 2).

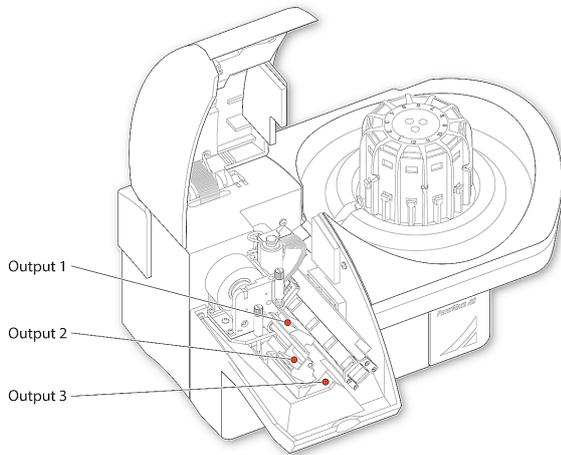


They can be connected so that they dispense either to the left or the right of the instrument as required.

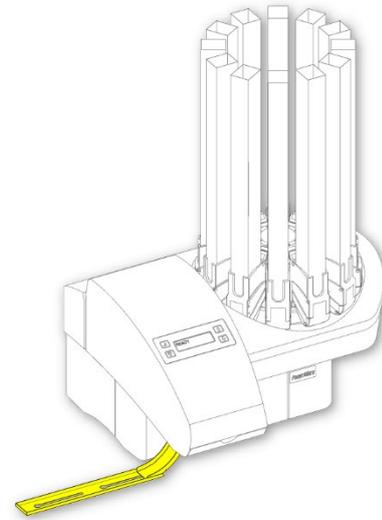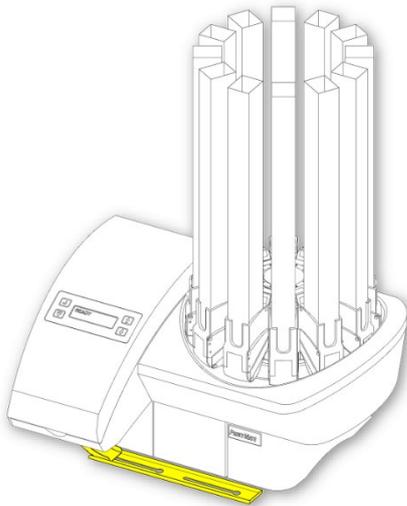


The Output Chutes are assembled and connected as follows:


- Fit the Location Button on the Upper Chute into the open end of one of the Keyhole Slots in the Lower Chute.

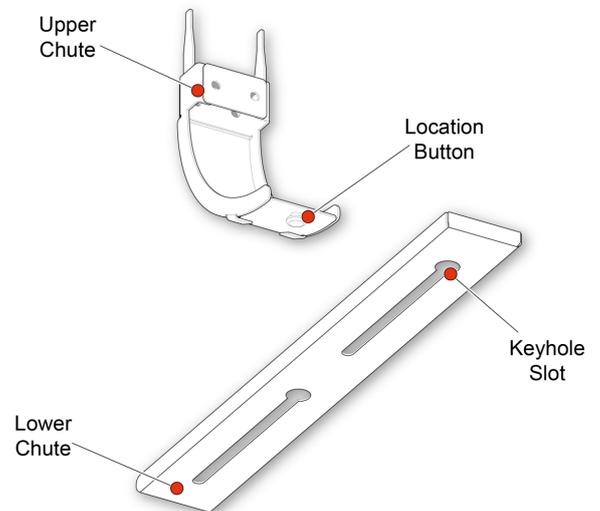

- Slide the Upper Chute along the Lower Chute so that the two pieces are securely located together.

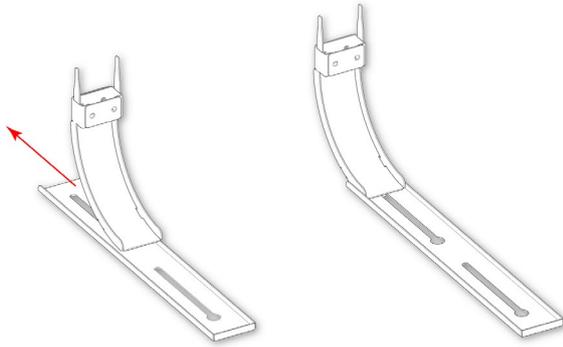

- The assembled Output Chute(s) should be fitted into the underside of PrintMate AS so that the Ball Spring Plunger locates fully into the Location Hole.

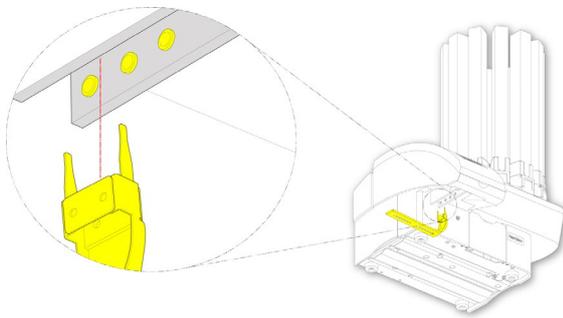

Failure to ensure correct fitting of the output chute may cause jams.


Changing the COM Port Settings

During the LabWriter Installation process (see LabWriter Operator Guide, Chapter 1 - Installing the LabWriter Application) the software should automatically detect the PrintMate AS and determine the correct COM Port Setting.

However, if LabWriter does not detect the PrintMate AS instrument the COM Port can be set manually.

The procedure for this is as follows:


- Ensure PrintMate AS is connected to the PC, is switched on and the Touch Panel Display shows **PrintMate AS Ready**.
- Open the Windows Control Panel.

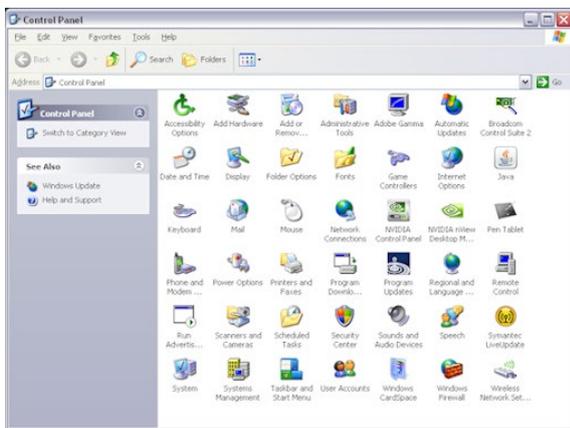


- Double-click on the System icon to display the System Properties window.




- In the System Properties window click on Device Manager.

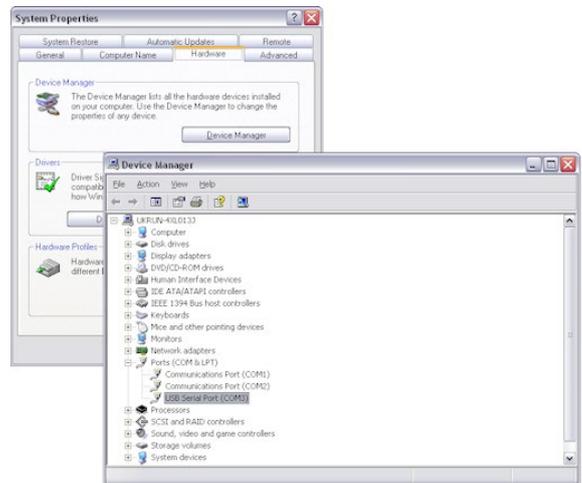

- The PrintMate AS connection will be listed as a **USB Serial Port** with a COM number after it.
- Note the COM Port number that the PrintMate AS is using.
- Run the LabWriter Application and enter the Admin Area (see LabWriter Operator Guide, Chapter 2 - Admin Logon).
- Click on the Devices Tab.
- Expand the **PrintMate** device and click on the PrintMate Sub-Level Device to display the Device Properties List.

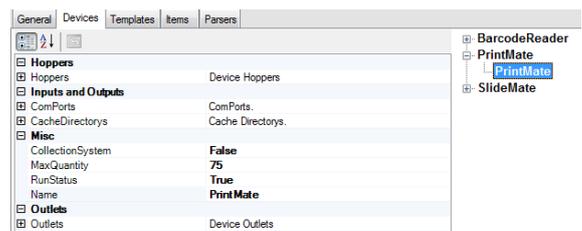


- Expand the COM Port property and select the appropriate COM number from the drop-down list in the field next to Port.

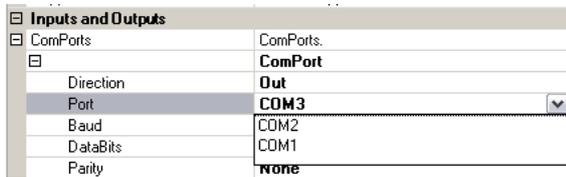

- Click **OK** and then the **Save** and **LogOff** button to exit the Admin Area.


- Set the Baud Rate to 57600 for PrintMate AS and to 19200 for PrintMate.

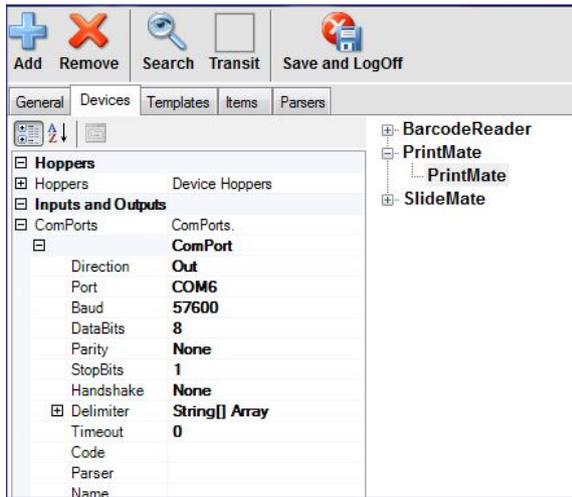

- Click on the Search icon at the top of the screen.



- After a pause LabWriter should display the following window to show that it has found the PrintMate AS.

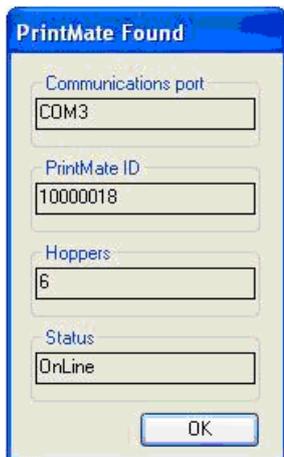

Chapter 3 - Basic Operation

Basic Operation

- [Loading Procedure:](#)
 - [Loading Cassette Tubes with Hopper Removed](#)
 - [Loading Cassette Tubes with Hopper In-Situ](#)
 - [Loading Single Cassettes Into Hopper](#)
 - [Loading Hoppers Onto the Carousel](#)
- [Changing the Foil Tape:](#)
 - [Removing the Used Foil Tape](#)
 - [Fitting the Foil Tape Roll](#)
- [Using the Touch Panel](#)

Hopper Types

Two colour coded types are available for PrintMate AS.

Note

For standard approved cassettes please use A79510024 (coloured black).


There are two methods of loading Cassette Tubes into Hoppers. Loading can be carried out with the Hopper removed from the Carousel or in-situ.

Loading procedure


Loading Cassette Tubes with Hopper Removed

To load Cassettes Tubes containing up to 75 Cassettes into a Hopper:


- Remove an empty Hopper from the Carousel.

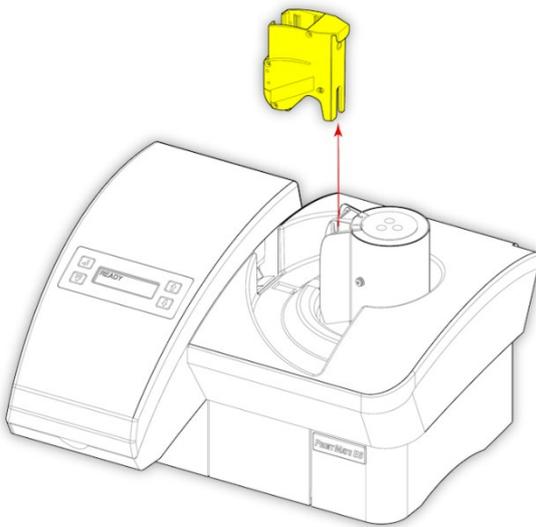

- Place the Hopper on a flat surface so that it is stood upright as shown.

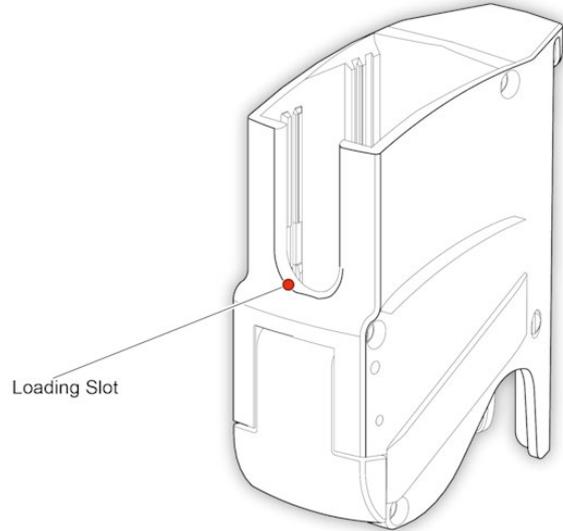

- Unpack a Tube of Cassettes and remove the End-Cap as shown.

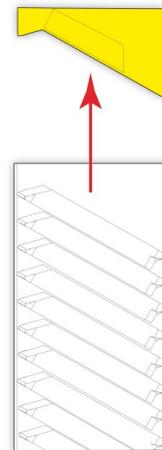


Note

Ensure the Cassette Tube is oriented as shown to avoid the Cassettes spilling out of the Tube.

- Use a finger to hold the Cassettes in the Tube and then turn it upside down so that the open end of the Tube is at the bottom.


- Lower the Tube into the open top of the Hopper, being sure to keep a finger on the bottom for as long as possible; there is a Loading Slot provided for this purpose.

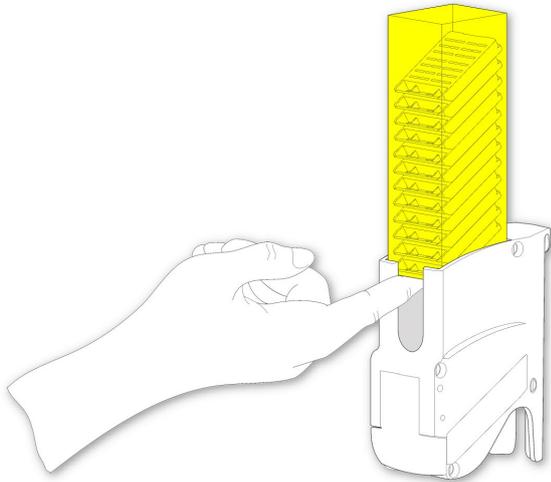

Ensure that the end of the Cassette Tube is not damaged or deformed as this may cause jams.



- Remove finger from the Loading Slot and allow the Cassettes to fall into position as shown.

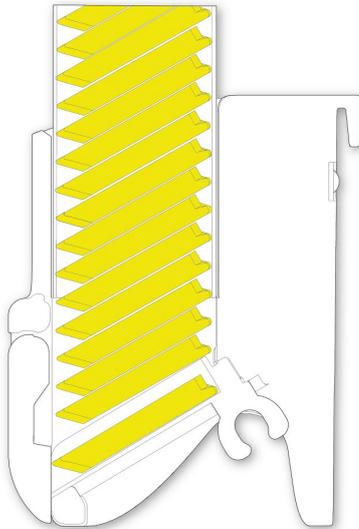

Note

When loading Cassette Tubes into Hoppers that are not attached to the Carousel, it is possible to fit the Hopper with the Tube upside down to avoid the risk of spilling the Cassettes out of the Tube.

- The Cassette Tube should sit on a step about half-way down the Hopper as shown.





Failure to ensure Cassettes are properly loaded can cause the hopper to jam.

Loading Cassette Tubes with Hopper in-Situ

5.1.1.4; 5.2.2.4



To load Cassette Tubes containing up to 75 Cassettes into a Hopper:

- Use the Control Panel to rotate the Carousel so that an empty Hopper is at the front of the instrument.

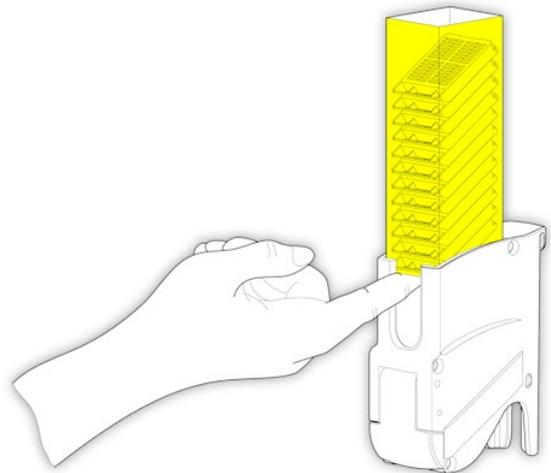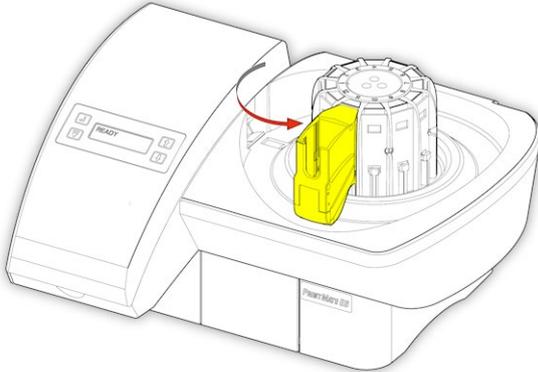

- Remove finger from the Loading Slot and allow the Cassettes to fall into position as shown.

 - Unpack a Tube of Cassettes and remove the End-Cap as shown.

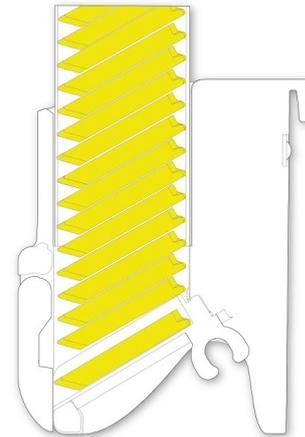

Note

Ensure the Cassette Tube is oriented as shown to avoid the Cassettes spilling out of the Tube.

- Use a finger to hold the Cassettes in the Cassette Tube and then turn it upside down so that the open end of the Cassette Tube is at the bottom.
- Lower the Cassette Tube into the open top of the Hopper, being sure to keep a finger on the bottom for as long as possible; there is a Loading Slot provided for this purpose.

- The Cassette Tube should sit on a step about half-way down the Hopper.



Failure to ensure Cassettes are properly loaded can cause the hopper to jam.




Ensure that the end of the Cassette Tube is not damaged or deformed as this may cause jams.

Loading Single Cassettes into Hoppers

To load individual Cassettes into Hoppers:

- Without removing the Hopper from the Carousel, drop a Cassette into the open top of the Hopper.

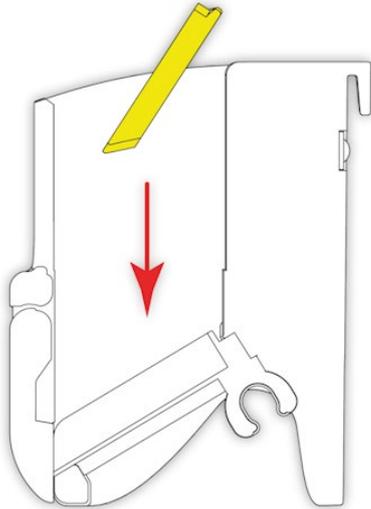

Failure to ensure the Cassette is properly loaded can cause the hopper to jam.



Do not mix cassette types when loading individual cassettes as this may cause the instrument to jam.


Note

Ensure the Cassette is oriented as shown.

Note

If the cassettes have lids, ensure they are fully closed before use.



- Ensure the Cassette sits as shown.

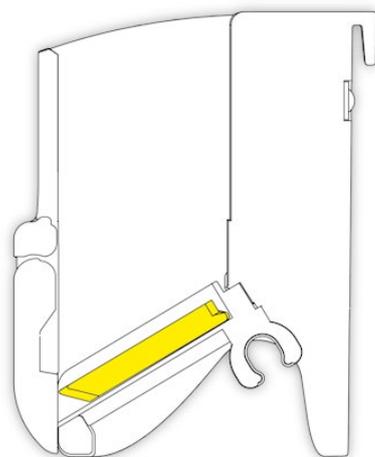


Loading Hoppers onto the Carousel

The Hoppers are loaded onto the Carousel as follows:


- Identify the features on the Hopper and Carousel shown below.

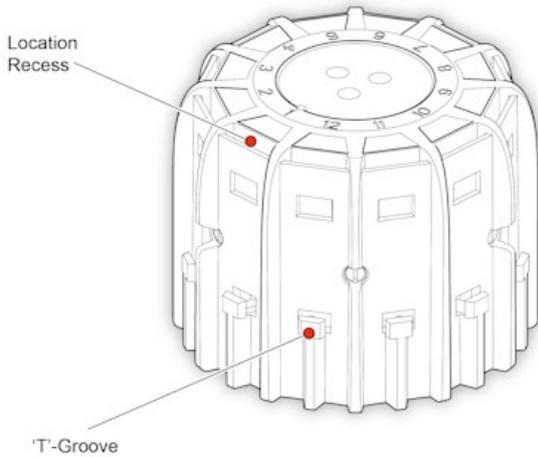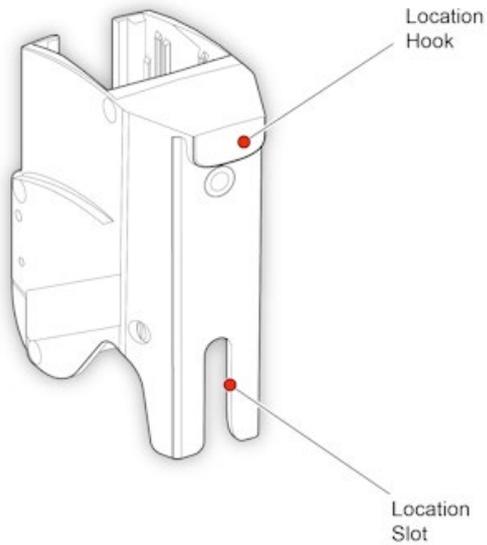

- Position the Hopper above the Carousel and lower it as shown.

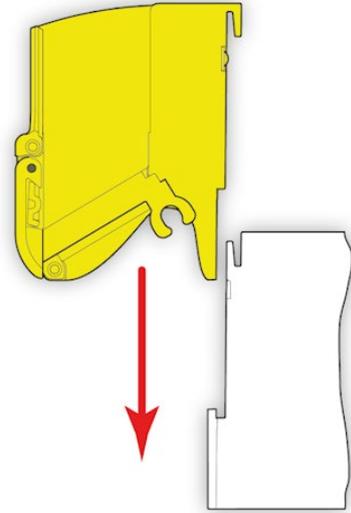

- Make sure that the following parts are fully engaged:
 - Location Slot and T-Groove.
 - Location Hook and Location Recess.

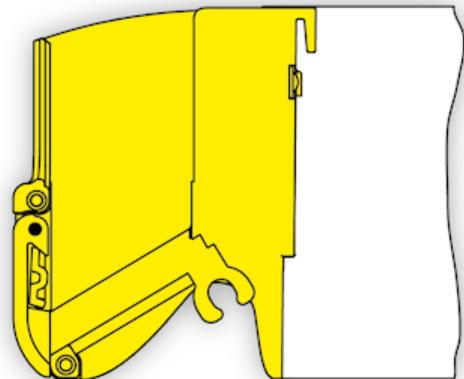

Failure to ensure all mating parts are properly engaged may cause damage to the instrument and / or the hoppers.



Ensure the hopper door is closed and the hopper slider is fully retracted before loading onto the carousel.

Changing the Foil Tape



When the Foil Tape has been used up the Touch Panel on PrintMate AS will display a message stating that the Foil Tape needs replacing.

- [Remove the Used Foil Tape](#)
- [Fit the Foil Tape Roll](#)

Removing the used Foil Tape

To remove the used Foil Tape:


- Open the Print Door and the Waste Spool Access hatch.

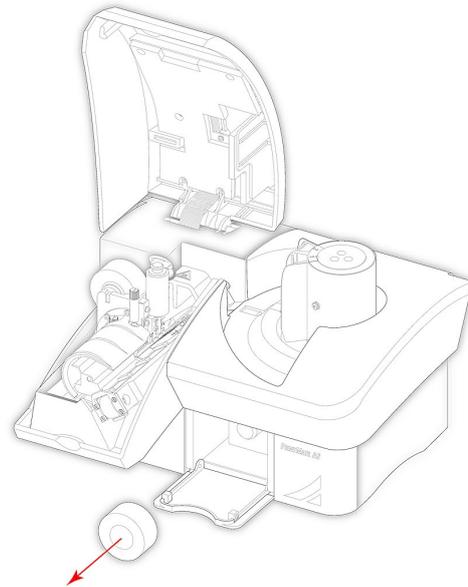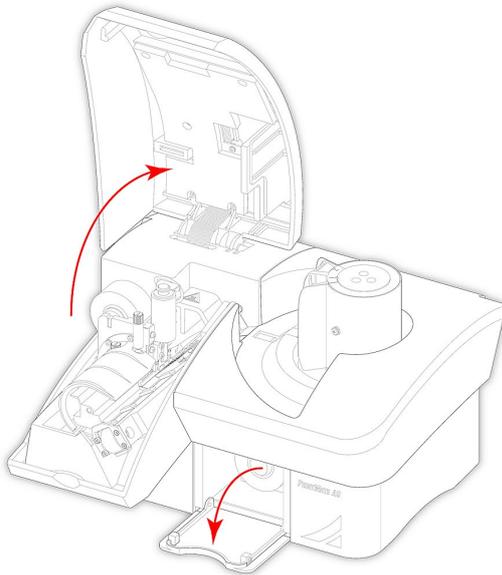

- Manually turn the Waste Spool to pull the remaining Foil Tape through the instrument.
- Remove the full Waste Spool and dispose of according to local regulations.

Fitting the Foil Tape Roll

Unpack a roll of Foil Tape.

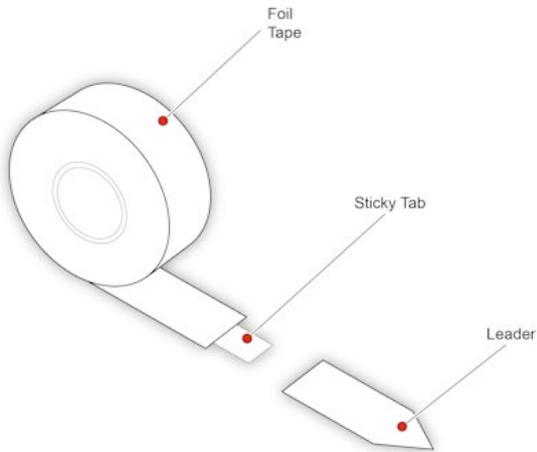


- The Foil Tape has a Leader to facilitate loading, and a Sticky Tab to connect the Tape to the Leader and the Waste Spool.

Note


An empty cardboard tube is packed with the new roll of Foil Tape for use as a new Waste Spool.

To load the Foil Tape:


- Remove the Load Spool by lifting it upwards.

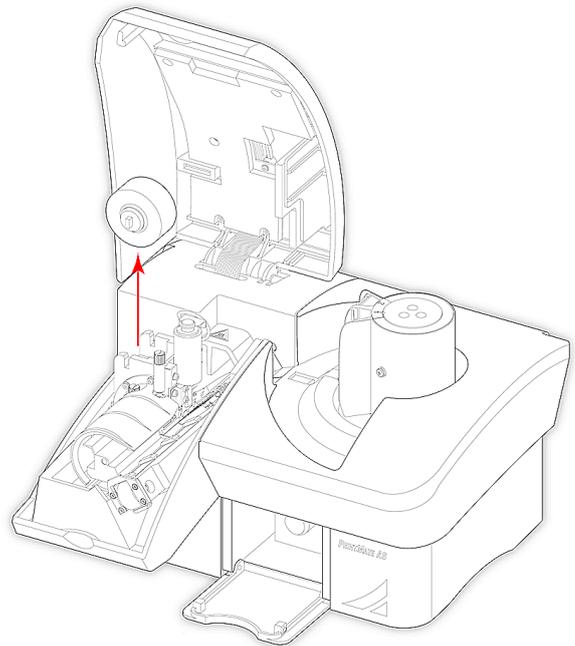

- Pull as shown, to allow the cardboard tube to slide off the Load Spool.

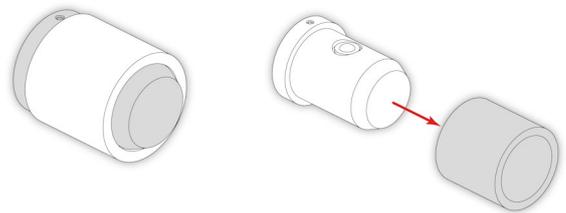


- Fit the new roll of Foil Tape by pushing it onto the Load Spool.

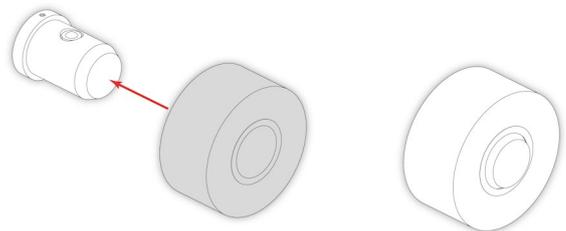


Note

Ensure the roll is pushed fully onto the Load Spool so that the retaining legs hold it securely in place.


- Fit the Load Spool and the Waste Spool as shown.

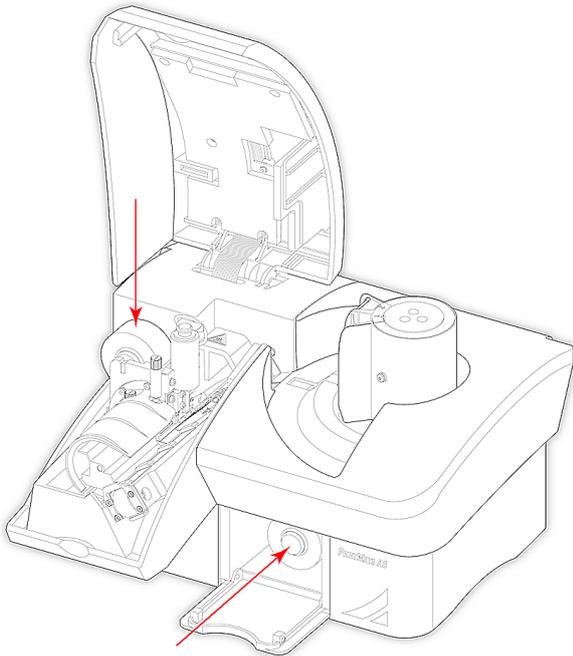


- Close the Print Door.

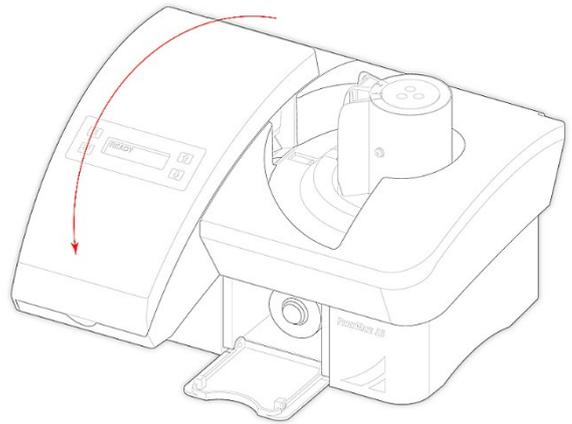


- Using the Touch Panel on PrintMate, take up the slack on the tape using the Tape Feed option.

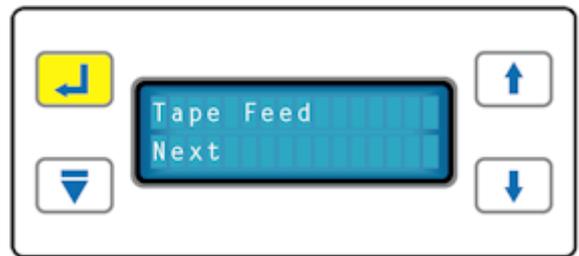

- Feed the Foil Tape Leader through PrintMate AS as shown; remove the leader and attach the lead end of the tape to the underside of the Waste Spool using the Sticky Tab.

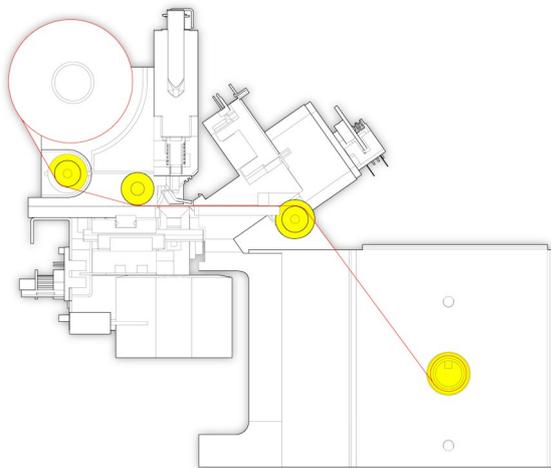

- Ensure the Foil Tape is being pulled through PrintMate by the rotating Waste Spool Shaft.
- Close the Waste Spool Access hatch.

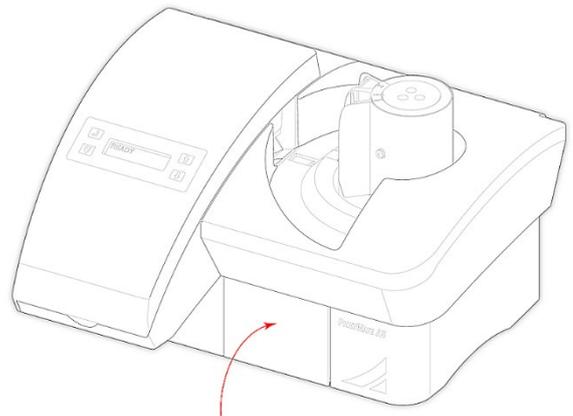

Incorrect loading of the foil tape may cause failure to print.




Do not insert objects such as pens or screwdrivers into the print head area when removing cassette jams or fitting new tape.


Using the Touch Panel

The Touch Panel located on the Print Door is used to perform a variety of functions.

The function of the buttons on the Touch Panel is dependent on the screen.

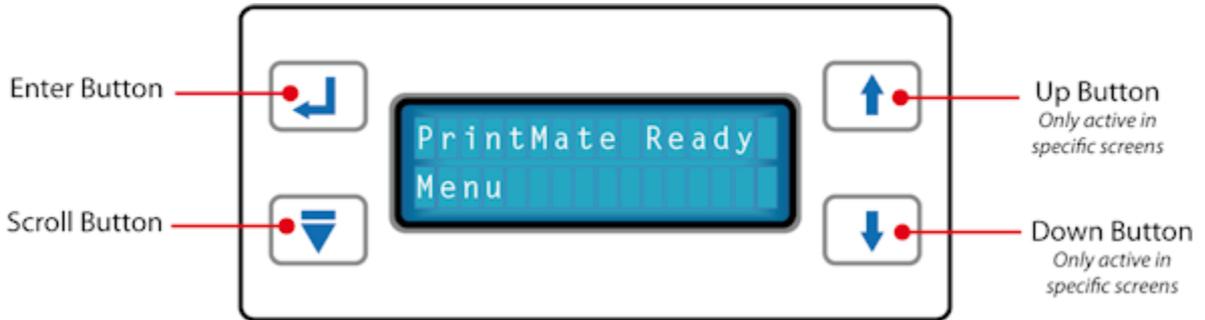

The LCD Display will indicate the function of each button as appropriate.

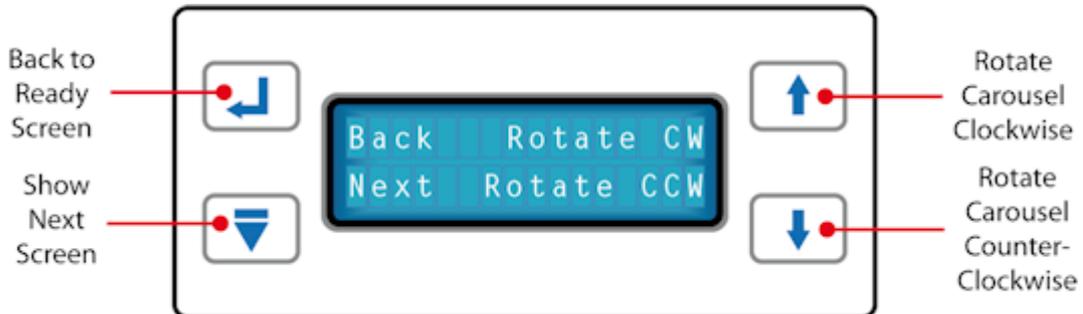

More details of specific screen operation can be found on the **Quick Reference Cards** (A82810016) supplied with the PrintMate AS.

Chapter 4 - Troubleshooting

- [Carousel Error](#)
- [Fail to Detect Cassette](#)
- [‘Hopper Empty’ Warning Displayed When Not Empty](#)
- [Dispense Error](#)
- [Dispense Lever Fails to Reset](#)
- [Conveyor Error](#)
- [Output Error](#)
- [Output Drum Error](#)
- [Loud Knocking Noise on Power-Up](#)
- [Instrument Not Responding](#)
- [Computer Not Responding](#)
- [Tape Errors](#)
- [Poor Print Quality](#)
- [No Print](#)
- [Part of Print is Missing](#)
- [Lower Line of Print is Misaligned](#)
- [Print is Faint](#)
- [Print Rubs Off Cassette Easily](#)
- [Barcodes Will Not Scan](#)
- [Print Contains Incorrect Information](#)



Do not insert objects such as pens or screwdrivers into the print head area when removing cassette jams or fitting new tape.

Carousel Error

Error Message / Symptom	Possible Cause	Remedy
Carousel Error	Obstructions on or around the Carousel.	<ul style="list-style-type: none"> • Check for, and remove if necessary, any obstructions which may be preventing the Carousel from rotating. • Use the Touch Panel or PC to continue.
	Hopper incorrectly seated on the Carousel and catching on casework.	<ul style="list-style-type: none"> • Ensure Hoppers are correctly seated on the Carousel (see Chapter 2 - Loading Hoppers Onto the Carousel). • Use the Touch Panel or PC to continue.
	Dispense lever interfering with Hopper Slider.	<ul style="list-style-type: none"> • Remove the Hopper at the output position and use the Touch Panel or PC to perform a Dispense Cycle and reset the dispense lever. • Replace the Hopper and retry.
	Hidden obstruction.	<ul style="list-style-type: none"> • Remove all Hoppers. • Use the Touch Panel to rotate the Carousel to check for correct operation.
	Instrument Malfunction	<ul style="list-style-type: none"> • Call the Eprexia Service Department.

Fail to Detect Cassette

Error Message / Symptom	Possible Cause	Remedy
Fail to detect Cassette	Cassette blockage when exiting Hopper.	<ul style="list-style-type: none"> • Open the Print Door and remove any visible Cassette. • Use the Touch Panel or PC to continue.
	Cassette blockage in Hopper.	<ul style="list-style-type: none"> • Remove the Hopper at the output position and use the Touch Panel or PC to perform a Dispense Cycle and reset the dispense lever. • Remove the Cassette Tube and / or any loose Cassettes in the Hopper. • Manually open and close the Hopper Slider a few time to ensure it moves freely. • Carefully reload the Cassettes and refit the Hopper to the Carousel. • Use the Touch Panel or PC to continue.
	Cassette not compatible.	<ul style="list-style-type: none"> • If using a non-approved Cassette, check that they manually dispense properly.
	Other Hopper Malfunction	<ul style="list-style-type: none"> • Fit another Hopper in the output position and check that it operates correctly. • If it does, this indicates that either the Cassettes or the Hopper is faulty.
	Instrument Malfunction	<ul style="list-style-type: none"> • Call the Eprexia Service Department.

'Hopper Empty' Warning Displayed When Not Empty

Error Message / Symptom	Possible Cause	Remedy
Hopper Empty warning displayed when not empty	Cassette blockage when exiting Hopper.	<ul style="list-style-type: none"> • Open the Print Door and remove any visible Cassette. • Use the Touch Panel or PC to continue.
	Cassette blockage in Hopper.	<ul style="list-style-type: none"> • Remove the Hopper at the output position and use the Touch Panel or PC to perform a Dispense Cycle and reset the dispense lever. • Remove the Cassette Tube and / or any loose Cassettes in the Hopper. • Manually open and close the Hopper Slider a few times to ensure it moves freely. • Carefully reload the Cassettes and refit the Hopper to the Carousel. • Use the Touch Panel or PC to continue.
	Cassette not compatible.	<ul style="list-style-type: none"> • If using a non-approved Cassette, check that they manually dispense properly.
	Other Hopper Malfunction	<ul style="list-style-type: none"> • Fit another Hopper in the output position and check that it operates correctly. • If it does, this indicates that either the Cassettes or the Hopper is faulty.
	Instrument Malfunction	<ul style="list-style-type: none"> • Call the Eprexia Service Department.

Dispense Error

Error Message / Symptom	Possible Cause	Remedy
Dispense error	Cassette blockage when exiting Hopper.	<ul style="list-style-type: none"> • Open the Print Door and remove any visible Cassette. • Use the Touch Panel or PC to continue.
	Cassette blockage in Hopper.	<ul style="list-style-type: none"> • Remove the Hopper at the output position and use the Touch Panel or PC to perform a Dispense Cycle and reset the dispense lever. • Remove the Cassette Tube and / or any loose Cassettes in the Hopper. • Manually open and close the Hopper Slider a few times to ensure it moves freely. • Carefully reload the Cassettes and refit the Hopper to the Carousel. • Use the Touch Panel or PC to continue.
	Cassette not compatible.	<ul style="list-style-type: none"> • If using a non-approved Cassette, check that they manually dispense properly.
	Securesette Hopper	<ul style="list-style-type: none"> • Using wrong hopper could cause jams
	Other Hopper Malfunction	<ul style="list-style-type: none"> • Fit another Hopper in the output position and check that it operates correctly. • If it does, this indicates that either the Cassettes or the Hopper is faulty.
	Instrument Malfunction	<ul style="list-style-type: none"> • Call the Eprexia Service Department.

Dispense Lever Fails to Reset

Error Message / Symptom	Possible Cause	Remedy
Dispense lever fails to reset	Cassette blockage when exiting Hopper.	<ul style="list-style-type: none"> • Open the Print Door and remove any visible Cassette. • Use the Touch Panel or PC to continue.
	Cassette blockage in Hopper.	<ul style="list-style-type: none"> • Remove the Hopper at the output position and use the Touch Panel or PC to perform a Dispense Cycle and reset the dispense lever. • Remove the Cassette Tube and / or any loose Cassettes in the Hopper. • Manually open and close the Hopper Slider a few times to ensure it moves freely. • Carefully reload the Cassettes and refit the Hopper to the Carousel. • Use the Touch Panel or PC to continue.
	Cassette not compatible.	<ul style="list-style-type: none"> • If using a non-approved Cassette, check that they manually dispense properly.
	Other Hopper Malfunction	<ul style="list-style-type: none"> • Fit another Hopper in the output position and check that it operates correctly. • If it does, this indicates that either the Cassettes or the Hopper is faulty.
	Instrument Malfunction	<ul style="list-style-type: none"> • Call the Eprexia Service Department.

Conveyor Error

Error Message / Symptom	Possible Cause	Remedy
Conveyor error	Cassette misfeed on Conveyor.	<ul style="list-style-type: none"> • Open the Print Door and remove any visible Cassette. • Use the Touch Panel or PC to continue.

Output Error

Error Message / Symptom	Possible Cause	Remedy
Output error	Cassette misfeed into Output Drum.	<ul style="list-style-type: none"> • Open Print Door. • Manually rotate Output Drum and remove any Cassettes. • Check that no Cassettes are trapped under the Output Drum or Conveyor block. • Use the Touch Panel or PC to continue.
	Cassette caught on Output Chute guides.	<ul style="list-style-type: none"> • Check that Output Chutes are correctly fitted and realign if necessary (see Chapter 3 - Connecting the Output Chutes). • Check that the side-guides on the Output Chute are not bent inwards and interfering with the Cassette as it exits.

Output Drum Error

Error Message / Symptom	Possible Cause	Remedy
Output Drum error	Cassette misfeed into Output Drum.	<ul style="list-style-type: none"> • Open Print Door. • Manually rotate Output Drum and remove any Cassettes. • Check that no Cassettes are trapped under the Output Drum or Conveyor block. • Use the Touch Panel or PC to continue.
	Cassette caught on Output Chute guides.	<ul style="list-style-type: none"> • Check that Output Chutes are correctly fitted and realign if necessary (see Chapter 3 - Connecting the Output Chutes). • Check that the side-guides on the Output Chute are not bent inwards and interfering with the Cassette as it exits.

Loud Knocking Noise on Power-Up

Error Message / Symptom	Possible Cause	Remedy
Loud knocking noise on power-up	Transit Fixing has not been removed.	<ul style="list-style-type: none"> • Ensure instrument is switched off. • Open the Print Door and ensure the transit lock lever is in the unlocked position - (see Chapter 3 - Unpacking).
	Cassette trapped in unit.	<ul style="list-style-type: none"> • Open Print Door and remove any visible Cassettes. • Rotate the Output Drum to ensure it is not being obstructed by Cassettes. • Restart the instrument.
	Hopper preventing Carousel rotation.	<ul style="list-style-type: none"> • Remove all Hoppers. • Restart the instrument.

Instrument not Responding

Error Message / Symptom	Possible Cause	Remedy
Instrument not responding	Software error.	<ul style="list-style-type: none"> • Check connections. • Switch off PrintMate AS, wait 5 seconds then switch back on. • Wait until the Touch Panel Display says PrintMate AS Ready before resuming operation.
		<ul style="list-style-type: none"> • Close down the LabWriter Application and restart it.
		<ul style="list-style-type: none"> • Switch off PrintMate AS. • Close down the LabWriter Application. • Reboot the PC. • Restart the LabWriter Application and PrintMate AS. • Check that the COM Port Settings for LabWriter are correct. • Check that the Baud Rate settings for LabWriter are correct: <ul style="list-style-type: none"> • PrintMate 19200 • PrintMate AS 57600

Computer not Responding

Error Message / Symptom	Possible Cause	Remedy
Computer not responding	Software error.	<ul style="list-style-type: none"> • Check connections. • Close down the LabWriter Application and restart it. • Hold down Ctrl + Alt + Delete to display the Windows Security dialog box. • Select Task Manager. • In the Applications Tab highlight LabWriter and select End Task. • Switch off PrintMate AS. • Close down the LabWriter Application. • Reboot the PC. • Restart the LabWriter Application and PrintMate AS.

Tape Errors

Error Message / Symptom	Possible Cause	Remedy
Tape errors	Tape feed error	<ul style="list-style-type: none"> • Check whether Tape has run out and replace if necessary (see Chapter 2 - Changing the Foil Tape). • Check whether Tape is slack - use the Tape Feed function on the Touch Panel to remove any slack if present. • Check Tape is fed through instrument correctly (see Chapter 2 - Changing the Foil Tape). • Check Waste Spool rotates after each Cassette is printed - If Waste Spool does not rotate call the Eprelia Service Department. • Cut Tape and remove used section from the Waste Spool. Re-feed remaining unused Tape as per Chapter 2 - Changing the Foil Tape.

Poor Print Quality

Error Message / Symptom	Possible Cause	Remedy
Poor print quality	Cassette colour.	<ul style="list-style-type: none"> Check that Cassette colour is included on Appendix C - Approved Cassette List.

No Print

Error Message / Symptom	Possible Cause	Remedy
No Print	Transit Lock Lever has not been unlocked.	<ul style="list-style-type: none"> Switch off PrintMate AS. Open Print Door. Ensure the Transit Lock Lever is in the unlocked position as shown in Chapter 3 - Setting Up PrintMate.
	Cassette or debris obstructing Print Head movement.	<ul style="list-style-type: none"> Open Print Door and check under Cassette Clamp for jammed Cassette or debris. Remove Cassette or debris as required.
	Tape roll finished.	<ul style="list-style-type: none"> Open Print Door and replace Tape (see Chapter 2 - Changing the Foil Tape).
	Tape jammed.	<ul style="list-style-type: none"> Open Print Door and Waste Spool Access. Use Tape Feed function on Touch Panel to check that Tape feeds correctly. If Tape does not feed remove and refit Tape (see Chapter 2 - Changing the Foil Tape)
	Cassette Clamp error.	<ul style="list-style-type: none"> Open Print Door and print a Cassette. Check Cassette is held securely during printing and does not move until the Cassette Clamp releases it. If movement is seen call the Eprexia Service Department.
	Instrument Malfunction.	<ul style="list-style-type: none"> Call the Eprexia Service Department.

Part of Print is Missing

Error Message / Symptom	Possible Cause	Remedy
Part of print is missing.	Print Template set up incorrectly.	<ul style="list-style-type: none"> • Ask Administrator to check Print Template setup. • Use Print to Screen function to check print layout.
	Tape jammed.	<ul style="list-style-type: none"> • Open Print Door and Waste Spool Access. • Use Tape Feed function on Touch Panel to check that Tape feeds correctly. • If Tape does not feed remove and refit Tape (see Chapter 2 - Changing the Foil Tape).
	Cassette Clamp error.	<ul style="list-style-type: none"> • Open Print Door and print a Cassette. • Check Cassette is held securely during printing and does not move until the Cassette Clamp releases it. • If movement is seen call the EpreDia Service Department.
	Print Head obstructed.	<ul style="list-style-type: none"> • Open Print Door and check under Cassette Clamp for debris.
	Incompatible Cassette.	<ul style="list-style-type: none"> • Check that Cassette type is included in Appendix C - Approved Cassette List.
	Instrument Malfunction.	<ul style="list-style-type: none"> • Call the EpreDia Service Department.

Lower Line of Print is Misaligned

Error Message / Symptom	Possible Cause	Remedy
Lower line of print is misaligned	Print Template set up incorrectly.	<ul style="list-style-type: none"> • Ask Administrator to check Print Template setup. • Use Print to Screen function to check print layout.
	Tape jammed.	<ul style="list-style-type: none"> • Open Print Door and Waste Spool Access. • Use Tape Feed function on Touch Panel to check that Tape feeds correctly. • If Tape does not feed remove and refit Tape (see Chapter 2 - Changing the Foil Tape).
	Cassette Clamp error.	<ul style="list-style-type: none"> • Open Print Door and print a Cassette. • Check Cassette is held securely during printing and does not move until the Cassette Clamp releases it. • If movement is seen call the EpreDia Service Department.
	Print Head obstructed.	<ul style="list-style-type: none"> • Open Print Door and check under Cassette Clamp for debris.
	Incompatible Cassette.	<ul style="list-style-type: none"> • Check that Cassette type is included in Appendix C - Approved Cassette List.
	Instrument Malfunction.	<ul style="list-style-type: none"> • Call the EpreDia Service Department.

Print is Faint

Error Message / Symptom	Possible Cause	Remedy
Print is faint	Cassette Clamp error.	<ul style="list-style-type: none"> • Open Print Door and print a Cassette. • Check Cassette is held securely during printing and does not move until the Cassette Clamp releases it. • If movement is seen call the EpreDia Service Department.
	Tape jammed.	<ul style="list-style-type: none"> • Open Print Door and Waste Spool Access. • Use Tape Feed function on Touch Panel to check that Tape feeds correctly. • If Tape does not feed remove and refit Tape (see Chapter 2 - Changing the Foil Tape).
	Incompatible or old Tape.	<ul style="list-style-type: none"> • Replace Tape with approved spare (see Appendix A - Spares and Accessories).
	Incompatible Cassette.	<ul style="list-style-type: none"> • Check that Cassette type is included in Appendix C - Approved Cassette List.
	Instrument Malfunction.	<ul style="list-style-type: none"> • Call the EpreDia Service Department.

Print Rubs Off Cassette Easily

Error Message / Symptom	Possible Cause	Remedy
Print rubs off Cassette easily	Cassette Clamp error.	<ul style="list-style-type: none"> • Open Print Door and print a Cassette. • Check Cassette is held securely during printing and does not move until the Cassette Clamp releases it. • If movement is seen call the Eprexia Service Department.
	Tape jammed.	<ul style="list-style-type: none"> • Open Print Door and Waste Spool Access. • Use Tape Feed function on Touch Panel to check that Tape feeds correctly. • If Tape does not feed remove and refit Tape (see Chapter 2 - Changing the Foil Tape).
	Incompatible or old Tape.	<ul style="list-style-type: none"> • Replace Tape with approved spare (see Appendix A - Spares and Accessories).
	Incompatible Cassette.	<ul style="list-style-type: none"> • Check that Cassette type is included in Appendix C - Approved Cassette List.
	Instrument Malfunction.	<ul style="list-style-type: none"> • Call the Eprexia Service Department.

Barcodes will not Scan

Error Message / Symptom	Possible Cause	Remedy
Barcodes will not scan	Print Template set up incorrectly.	<ul style="list-style-type: none"> • Ask Administrator to check Print Template setup. • Use Print to Screen function to check print layout.
	Barcode Reader Error.	<ul style="list-style-type: none"> • Refer to your barcode readers instructions manual.
	Cassette Clamp Error.	<ul style="list-style-type: none"> • Open Print Door and print a Cassette. • Check Cassette is held securely during printing and does not move until the Cassette Clamp releases it. • If movement is seen call the EpreDia Service Department.
	Software Error.	<ul style="list-style-type: none"> • Call the EpreDia Service Department.
	Instrument Malfunction.	<ul style="list-style-type: none"> • Call the EpreDia Service Department.

Print contains Incorrect Information

Error Message / Symptom	Possible Cause	Remedy
Print contains incorrect information	Print Template set up incorrectly.	<ul style="list-style-type: none"> • Ask Administrator to check Print Template setup. • Use Print to Screen function to check print layout.
	Software error.	<ul style="list-style-type: none"> • Call the EpreDia Service Department.
	Instrument Malfunction.	<ul style="list-style-type: none"> • Call the EpreDia Service Department.

Chapter 5 - Cleaning and Maintenance

Cleaning and Maintenance

- [Cleaning Procedure.](#)
- [Changing Fuses.](#)

Cleaning Procedure

To ensure continuous reliable operation the following cleaning procedures should be carried out on a weekly basis:

- Use damp cloth and a 10% commercial, Hypochlorite bleach solution in water to wipe the outer covers and output chutes (if fitted).



Never use solvents on the covers as these may discolour the plastic parts.

- Use a vacuum cleaner with a non-metallic nozzle to remove any accumulated dust from the internal areas.



Cassette pre-heat area may be hot.

Note

Before carrying out any cleaning or maintenance procedures the user must have read and understood the following statements:



If the Instrument has been used with, or has come into contact with, hazardous material, ensure that the appropriate decontamination procedures have been followed (See World Health Organization Laboratory Biosafety Manual)



Cleaning or decontamination methods, other than those recommended in this document, should be checked with an EpreDia agent to ensure that they will not damage the instrument.



Always wear suitable protective coverings when carrying out cleaning using chemicals.



Do not use chemicals which may interact with the materials of manufacture - If in doubt contact your EpreDia agent.



Do not use hypochlorites in strong solution.



Do not use abrasive compounds or metal components to clean the Instrument or its accessories.



Always clean up spills immediately.



In the event of a major spillage on or around the Instrument, immediately disconnect the instrument from the Mains supply, and do not reconnect until the instrument has been thoroughly dried and checked by San EpreDia Service Engineer.



Potentially lethal voltages in excess of 110VAC are present within the Instrument - Do not remove any access covers.



Disconnect the Instrument from the Mains before cleaning.




Inspect the instrument for obvious damage or wear whenever it is being cleaned.


Changing Fuses

To replace the fuses:


- Disconnect the Power Lead from the Mains Power Supply.
- Remove the Power Lead from the Power Connector.

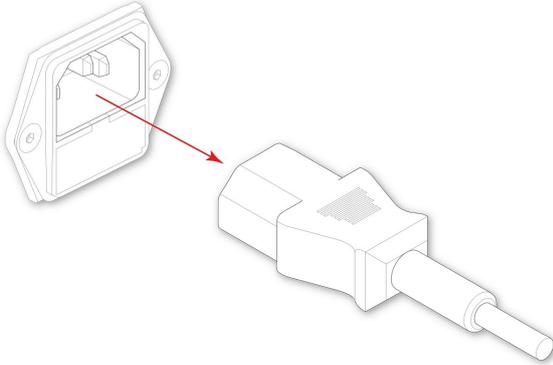

- Remove the Fuses.

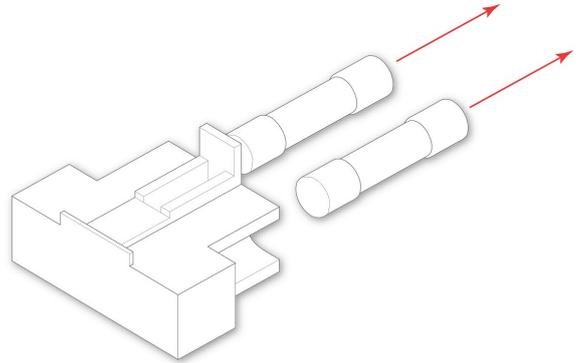

- Remove the Fuse Drawer.

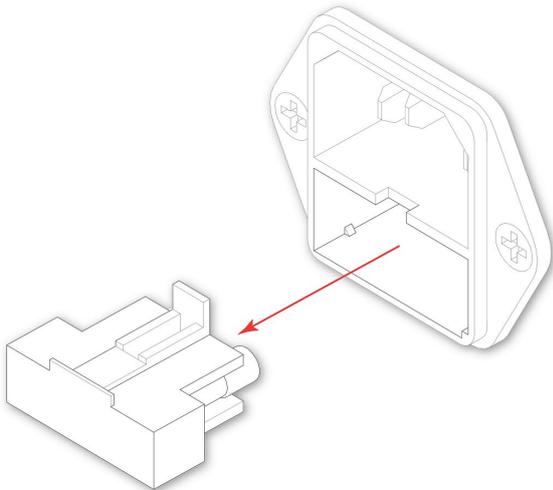

- Replace with approved Fuses ([see Appendix A](#)).

Note

Always replace fuses as a pair.

Only a technically competent person should replace fuses.

Appendices

Appendix A - Spares and Accessories

Spares and Accessories list

Item	Order Number
Hot Foil Tape (Pk. of 5)	A79510013
Collection System	A79510014
Basic LabWriter Software CD	A79510018
PC with Pre-loaded LabWriter Software	A79510021
Collection Trays (Pk. of 4) STD Cassettes only	A79510022
Guide Chute with Extension	PM 'AS' Version - A82810024
Hopper (1 off)	A79510024
PrintMate AS Operator Guide	A83810100
LabWriter Operator Guide	A82810105
Fuse Kit	A79510045


Note

Collection System - A82810113 - For use with standard approved cassette types only.

Appendix B - Repacking Instructions

Note

Before repacking the PrintMate AS use the Touch Panel to move the Print Head to the Transit position, then move the transit lock back from the stored position to the locked position.

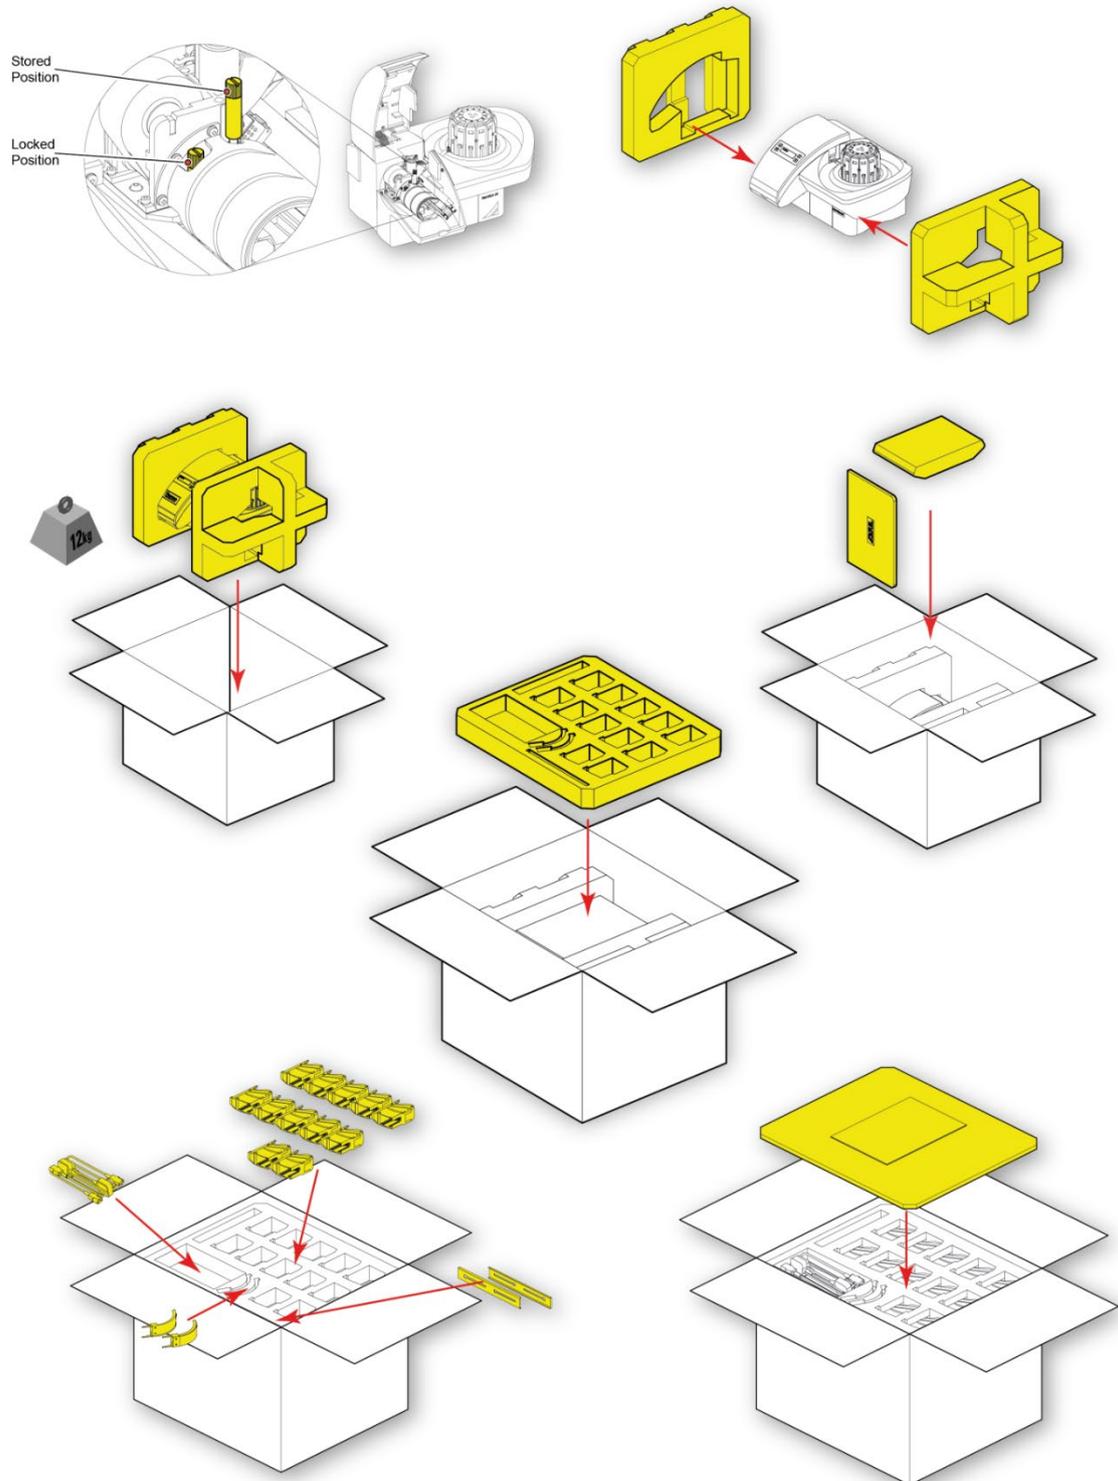

Appendix C - Approved Cassette List

Approved Cassette Types

The following Cassette types have been approved for use with the EpreDia PrintMate AS:

- EpreDia Biopsy Processing/Embedding Cassette Type II
- EpreDia Processing/Embedding Cassette Type II
- EpreDia Embedding Cassette
- EpreDia Tissue Cassette Type IV
- EpreDia Microsette Biopsy Cassettes
- EpreDia Micromesh Biopsy Cassette
- EpreDia Cassette (with attached lid)



Use of Cassettes not on this list may cause poor performance and / or damage to the instrument.

Approved Cassette Colours

- White (WH)
- Pink (PK)
- Green (GR)
- Yellow (YW)
- Blue (BL)
- Grey (GY)
- Orange (OR)
- Peach (PE)
- Tan (TN)
- Lilac (LI)
- Aqua (AQ)
- Fluorescent Green (FGR)
- Fluorescent Pink (FPK)
- Fluorescent Yellow (FYW)



Use of colours not listed above may cause print to become unreadable.

Index

A

Appendices	53
Appendix A - Spares and Accessories.....	53
Appendix B - Repacking Instructions.....	54
Appendix C - Approved Cassette List.....	55

B

Basic Operation.....	25
----------------------	----

C

Changing Fuses.....	52
Cleaning	51
Cleaning and Maintenance.....	51
Cleaning Procedure	51
COM Port Settings.....	22
Changing the COM port settings.....	22
Company Information	3
contents	4

E

Electrical Connections	19
------------------------------	----

F

Foil Tape.....	31, 32
Changing the Foil Tape	31
Fitting the Foil Tape Roll	32
Removing the used Foil Tape	31
Fuses	52

H

Hopper Types.....	26
Hoppers	30
How to use this Guide	7
Introduction.....	7

I

Installation and Setup	15
Introducing PrintMate AS.....	9

Identification of Parts	10
-------------------------------	----

L

Loading.....	26, 28, 29, 30
Loading Cassette Tubes with Hopper in-Situ.....	28
Loading Cassettes Tubes with Hopper Removed	26
Loading Hoppers onto the Carousel.....	30
Loading Single Cassettes into Hoppers	29
Locating PrintMate AS.....	18

M

Maintenance	51
-------------------	----

O

Output Chutes	20
Connecting the Output Chutes	20

P

PrintMate AS external connections.....	12
PrintMate AS Print Head.....	13
PrintMate AS Product Range.....	8
PrintMate AS with doors closed.....	10
PrintMate AS with doors open.....	11

S

Safety Information	5
Environment	6
General Safety.....	5
Introduction	5
Warranty Statement.....	6
Setting up PrintMate AS.....	16
Spares and Accessories list.....	53
Start up Procedure.....	19
System Interaction	14
System Specification	14
Electrical Specification	14
Environmental Specification	14
Mechanical Specification	14

T

Touch Panel	34
Troubleshooting.....	35
<i>Troubleshooting</i>	
<i>Carousel Error</i>	36
<i>Troubleshooting</i>	
<i>Fail to Detect Cassette</i>	37
<i>Troubleshooting</i>	
<i>'Hopper Empty' warning displayed when not empty</i>	38
<i>Troubleshooting</i>	
<i>Dispense Error</i>	39
<i>Troubleshooting</i>	
<i>Dispense Lever Fails to Reset</i>	40
<i>Troubleshooting</i>	
<i>Conveyor Error</i>	40
<i>Troubleshooting</i>	
<i>Output Error</i>	41
<i>Troubleshooting</i>	
<i>Output Drum Error</i>	41
<i>Troubleshooting</i>	
<i>Loud Knocking Noise on Power Up</i>	42
<i>Troubleshooting</i>	
<i>Instrument not Responding</i>	42

<i>Troubleshooting</i>	
<i>Computer not Responding</i>	43
<i>Troubleshooting</i>	
<i>Tape Errors</i>	43
<i>Troubleshooting</i>	
<i>Poor Print Quality</i>	44
<i>Troubleshooting</i>	
<i>No Print</i>	44
<i>Troubleshooting</i>	
<i>Part of Print is Missing</i>	45
<i>Troubleshooting</i>	
<i>Lower Line of Print is Misaligned</i>	46
<i>Troubleshooting</i>	
<i>Print is Faint</i>	47
<i>Troubleshooting</i>	
<i>Print rubs off cassette easily</i>	48
<i>Troubleshooting</i>	
<i>Barcodes will not scan</i>	49
<i>Troubleshooting</i>	
<i>Print contains incorrect information</i>	49

U

Unpacking.....	16
Using the Touch Panel	34



www.epredia.com



**Tudor Road, Manor Park
Runcorn, WA7 1TA
United Kingdom
+44 (0) 800 018 9396
+44 (0) 1928 534 000**

**4481 Campus Drive
Kalamazoo, MI 49008
United States
+1 (800) 522-7270**



Enhancing precision
cancer diagnostics

Document Approvals
Approved Date: 23 Jun 2021

Task: Approval Verdict: Approve	Christa Marshall, Global Program Training Manager (christa.marshall@epredia.com) Management Approval 23-Jun-2021 17:17:45 GMT+0000
------------------------------------	---

Task: QA Approval Verdict: Approve	Christa Marshall, Global Program Training Manager (christa.marshall@epredia.com) Quality Assurance Approval 23-Jun-2021 17:18:38 GMT+0000
---------------------------------------	--