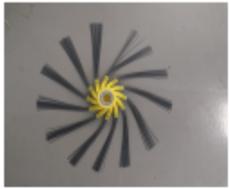


10- Switch Cleaning Mode

Phantas S1

Robot has 4 cleaning modes and each mode requires specific hardware. Please refer to the table below.

Cleaning Mode	Side Brush	HEPA	Main Brush	Sub Brush(bristle or cloth)	Dust Box	Dust Tank	Dust Bag	Water Tank	Squeegee
Figure				 					
Scrubbing	Not Essential	Essential	Essential	Essential (short bristle brush)	Essential	NA	NA	Essential	Essential
Vacuum	Essential	Essential	Essential	Essential (cloth brush or short bristle brush)	Essential	Essential	Essential	NA	Not Essential
Dust Mop	Essential	Not Essential	Essential	Essential (cloth brush)	Essential	Not Essential	Not Essential	Not Essential	Not Essential
Sweep	Essential	Not Essential	Essential	Essential (short bristle brush)	Essential	Not Essential	Not Essential	Not Essential	Not Essential