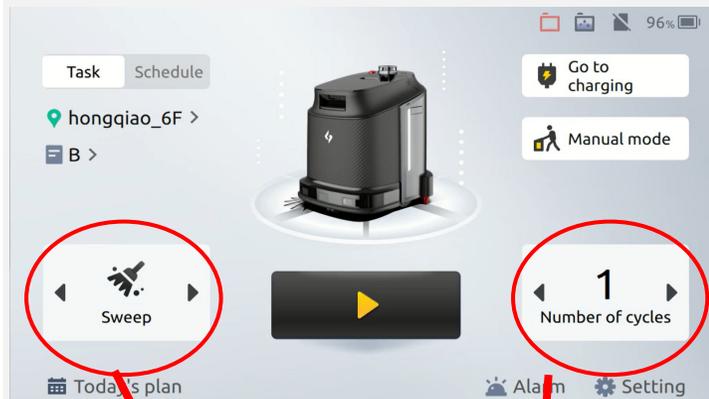## 4.Choose cleaning mode

Four options:scrubbing, dust mopping, sweeping, vacuuming

Cleaning mode will be switched after each click.
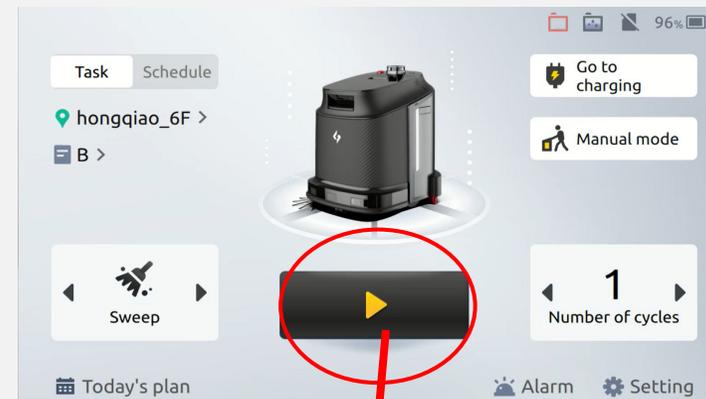

Cleaning Mode   Loop times

5.Start auto operation

Click start.

Start

6.Auto-operation interface