



Ikalamas

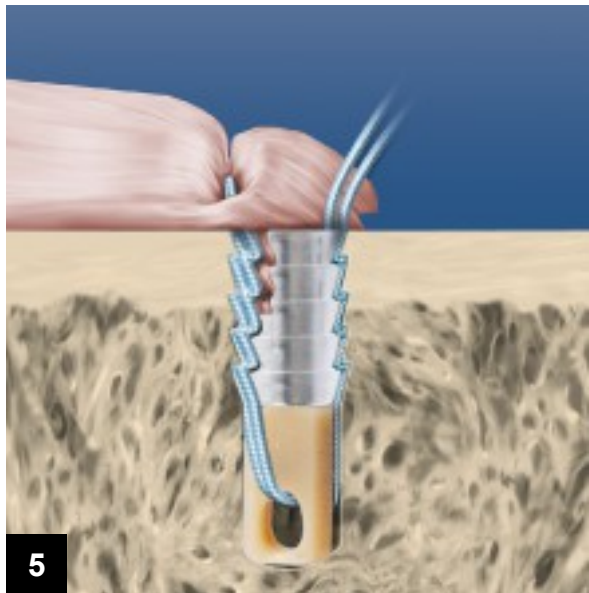


Impact metal striking head on the back of the PushLock driver to insert the tak portion of the anchor into the hole and lock the sutures.

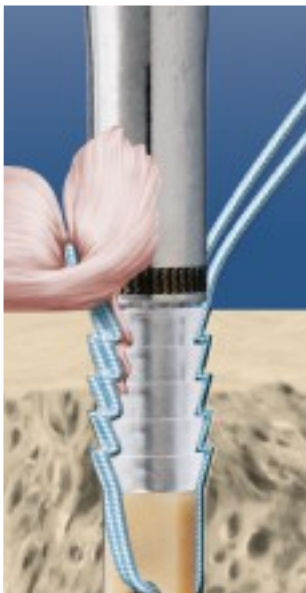

Rotate the handle six full turns counterclockwise to unthread from the eyelet. Remove the handle. Cut the sutures flush.

Pull-out Comparison*

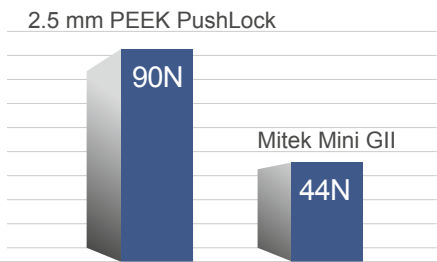

*data on file



Actual Size

Ivedimo instumentas

2.5 mm PushLock



2.5 mm diameter
Bio-PushLock

2.5 mm diameter
PEEK PushLock

