1. H80 – Installation of Pick & Place at HB10-HB16

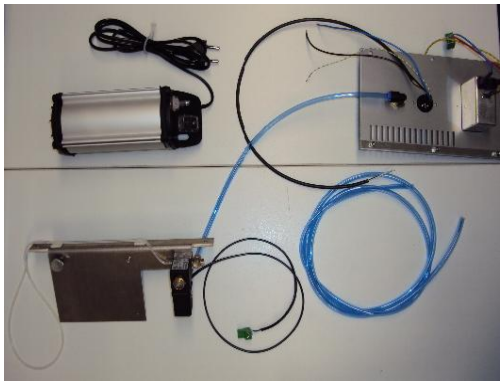

H80 Pick and Place Retrofit Kit for HB16 Bonder

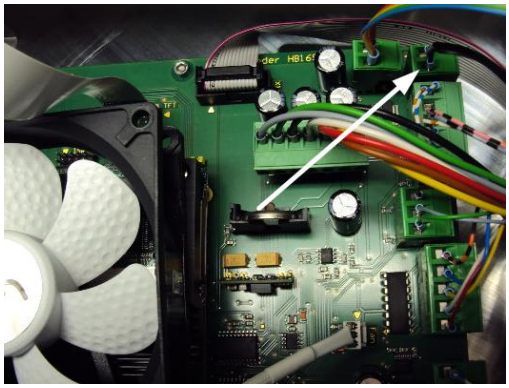

Connector from vacuum valve to motherboard

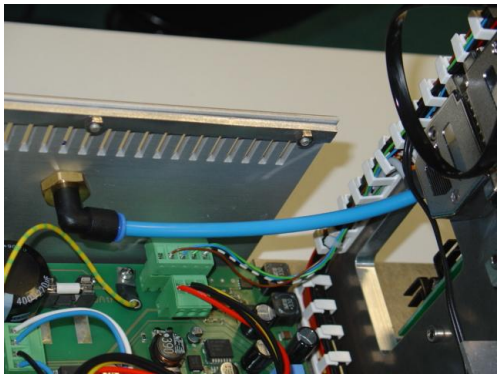

Vacuum hose back panel

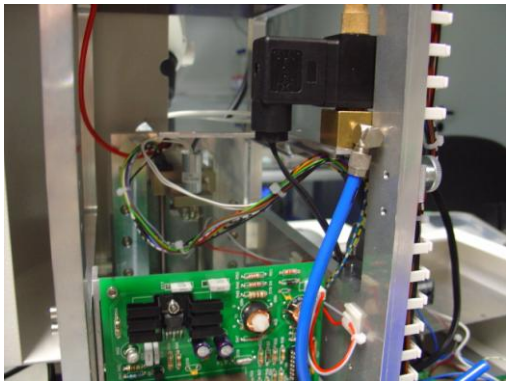

vacuum hose to vacuum switch

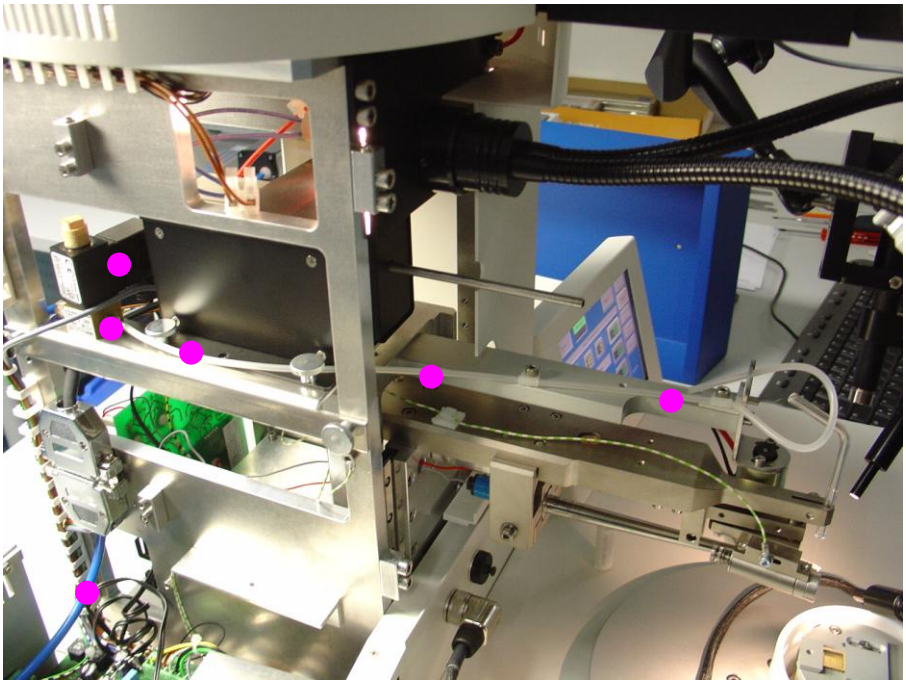

Vacuum hose from vacuum switch to pick and place tool

©TPT wire bonder – all rights reserved