

# Recycling Passport

# Dräger

**Device: FPS-COM 7000**

Issued: 2015-11-04

## 1. Producer information

Name:	Dräger Safety AG & Co. KGaA
Address:	Revalstraße 1 D-23560 Lübeck
Web page:	www.draeger.com

## 2. Product identification



Product name:	FPS-COM 7000
Model number:	R61100 / R61300 / R61350
WEEE device category:	3
Product description:	Mask integrated communication device
Total weight [kg]:	415g
Dimensions H x W x D [cm] :	165x140x200
RoHS conformity:	Yes



**WARNING:** This device may be contaminated because of its former use. The last device owner has to sanitize the device before transferring it to the waste management enterprise. He has to certify the disinfection in written to the waste management enterprise. In case of indication of contaminated devices/components, special safety measures are required and a specialist has to be involved immediately. Existing hoses and anesthesia bags have to be removed before recycling process.

### 3. Directions for disassembling

parts/materials/substances	Installation location (no.)	weight [g]	Important hints (properties, tools for disassembling)
<b>3.1 Hazardous parts and components for removing and separate treatment</b>			
batteries /disassembly 2x AA-LR6 alkaline battery, screw (1x), O-Ring (1x)	1	49	H2.0 Hex Head Screwdriver
<b>Subtotal weight:</b>			
<b>3.2 Parts/components interfering with the recycling process</b>			
hidden mechanical springs → disassembly channel sliding switch / screws (1x), thermoplastic parts (2x), springs (2x)	2	4	Torx T8 screwdriver
hidden mechanical springs → disassembly volume sliding switch / screws (2x), thermoplastic parts (2x), springs (2x)	3	4	Torx T8 screwdriver
<b>Subtotal weight:</b>			
<b>3.3 Homogeneous parts/components which may be disassembled with added value and potentially generate proceeds</b>			
disassembly earphones / earphones (2x), screw (2x), O-Ring (2x)	4	32	Torx T8 screwdriver
disassembly slide-in module (TR / BT / Blind) / slide-in module (1x), O-Ring (1x), screw (1x), spring (1x)	5	55	H2.0 Hex Head Screwdriver
disassembly fixation clips / screws (2x), thermoplastic parts (2x)	6	3	Torx T8 screwdriver
disassembly loudspeaker right and left / screws (4x), thermo-plastic- (2x) and elastomer (2x) parts, loudspeaker (2x)	7	45	Torx T8 screwdriver
disassembly PTT button / screws (3x), thermoplastic- (2x) and elastomer (1x) parts	8	9	Torx T8 screwdriver
disassembly middle part (thermoplastic part) of unit and screws (4x)	9	22	Torx T8 screwdriver
<b>Subtotal weight:</b>			
<b>Total weight of all parts for separation:</b> (=sum of categories 3.1-3.3)		<b>223 g</b>	

### 4. Materials which remain after the preliminary separation

Substances	Weight [g]
<b>Iron, iron alloys</b>	
Iron (screws)	
<b>Plastics</b>	
Thermoplastic	
Elastomers	
<b>Others</b>	
Electronic printed circuit board assembly	
Wires and Connectors	
<b>Total weight of materials which remain after the preliminary separation:</b>	<b>192 g</b>
<b>Total weight device [kg]:</b>	<b>415 g</b>


## 5. Installation location of parts/materials mentioned in categories 3.1 - 3.3

### Ausgangssituation



**Categorie 1**

**Installation location no. 1**

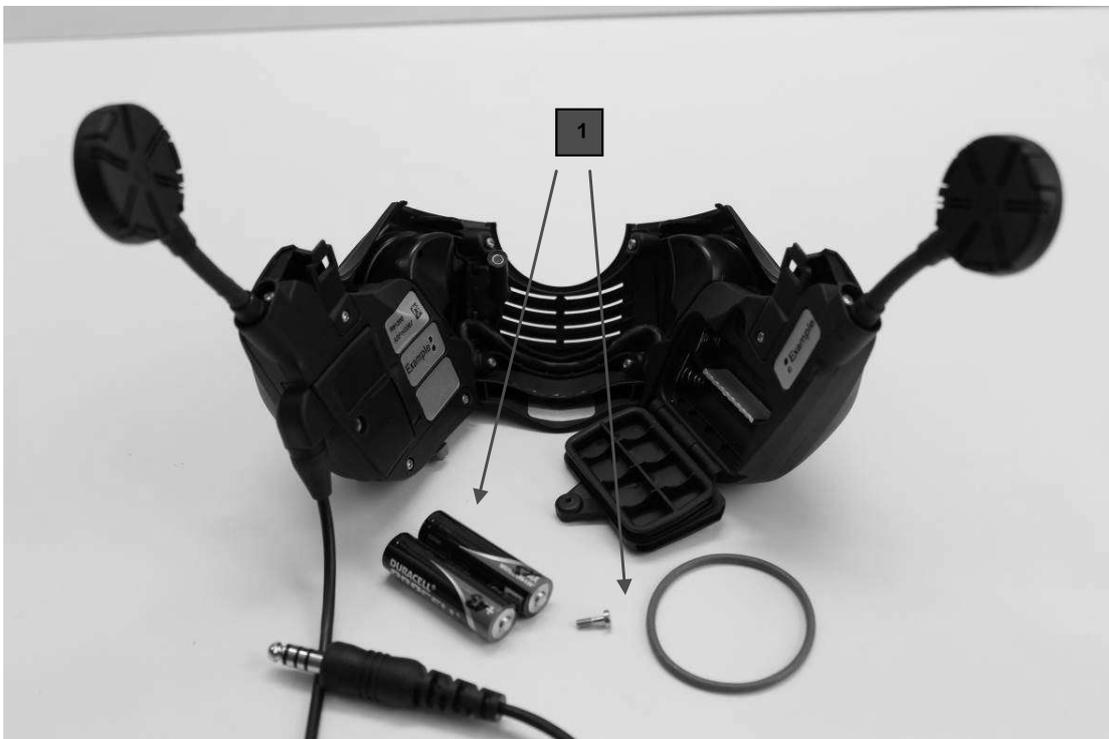

Categorie 2

Installation location no. 2




Use of this document / contents is forbidden without express authority. All rights reserved. Refer to protection notice ISO 16016.  
Printed copies are uncontrolled and for reference purposes only.

### Installation location no. 3



**Categorie 3**

**Installation location no. 4**

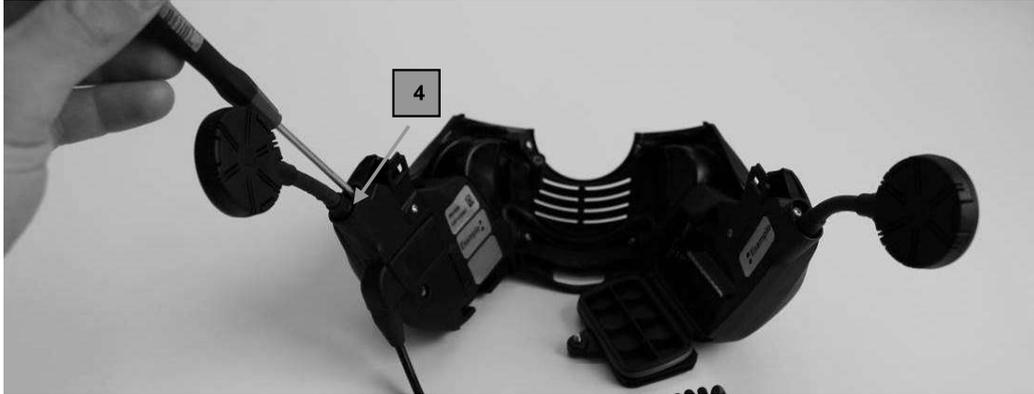

### Installation location no. 5



### Installation location no. 6



### Installation location no. 7

Left Side:




Right Side:



### Installation location no. 8



### Installation location no. 9

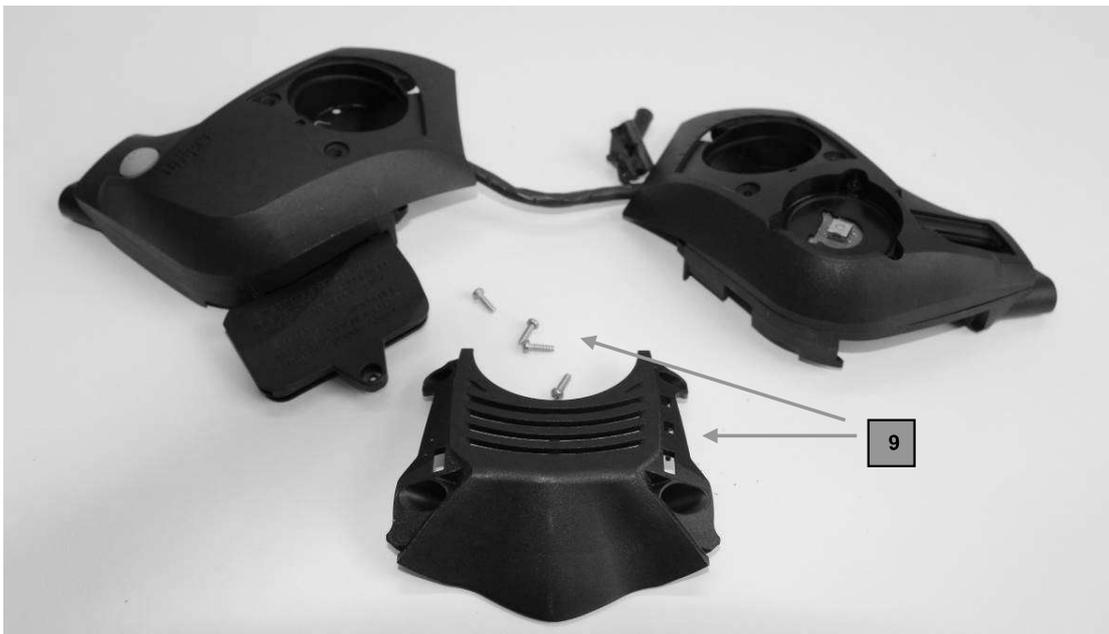

#### Note:

If a suitable shredder is existing and the batteries are removed (see installation location no. 1) it is possible to shred the whole unit without disassembly other parts.

#### Legal disclaimer:

Every effort has been made to provide accurate information at the date of publication of this document. It is provided for information only. Draeger Medical therefore does not assume any legal warranty for any error or any consequences which may arise from the use of this information.