

Recycling Passport

Dräger


Device: Dräger C-C440

Issued: 2019-01-24

1. Producer information

Name:	Dräger Safety AG & Co. KGaA
Address:	Revalstr. 1 D-23560 Lübeck Germany
Web page:	www.draeger.com

2. Product identification

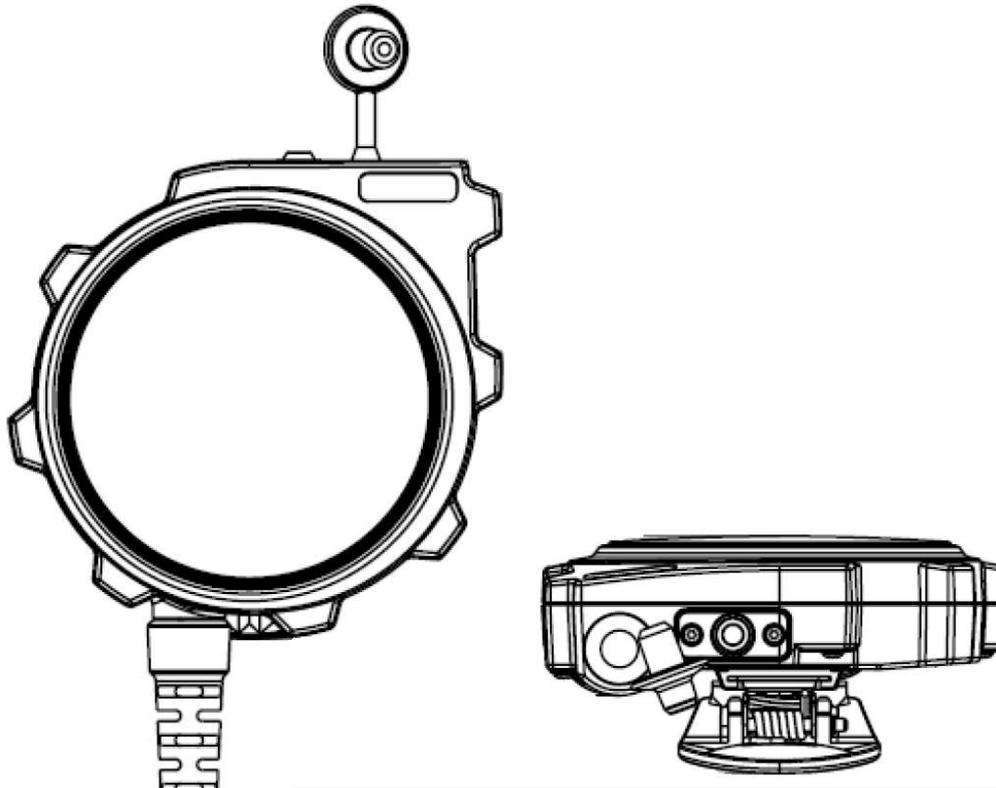

Product name:	Dräger C-C440
Model number:	
WEEE device category:	IT and telecommunications equipment (cat. 3)
Product description:	Push to Talk Button
Total weight [kg]:	0,198
Dimensions H x W x D [cm] :	8,8 x 9,0 x 3,0
RoHS conformity:	Yes

Use of this document / contents is forbidden without express authority. All rights reserved. Refer to protection notice ISO 16016.
Printed copies are uncontrolled and for reference purposes only.

id. no./rev. no.

Recyclingpass
Vorlage für Recycling Pass Dräger Safety


page / of
1 / 3

3. Directions for disassembling			
parts/materials/substances	Installation location (no.)	weight [kg]	Important hints (properties, tools for disassembling)
3.1 Hazardous parts and components for removing and separate treatment			
printed circuit boards larger than 10 cm ²	1	0,011	Tx8 screw driver, wire cutters Open screws, cut wires next to PCBA
electric cables	2	0,048	Tx8 screw driver, wire cutters Open screws, cut wires next to PCBA, turn bend relief open.
Subtotal weight:		0,059	
3.3 Homogeneous parts/components which may be disassembled with added value and potentially generate proceeds			
Cover parts	3a, 3b	0,085	Tx8 screw driver, wire cutters Open screws, cut wires next to PCBA, turn bend relief open. Remove seger ring from QR4 connector
PTT button	4	0,006	Tx8 screw driver Open screws
Belt clip	5	0,03	Tx6 screw driver Open screw, slide clip downwards
Spring	6	0,005	Tx8 screw driver Open screws
QR4 connector	7	0,01	Tx8 screw driver, wire cutters Open screws, cut wires next to PCBA, Remove seger ring from QR4 connector
Subtotal weight:		0,136	
Total weight of all parts for separation: (=sum of categories 3.1-3.3)		0,0195 kg	

4. Materials which remain after the preliminary separation

Substances	Weight [kg]
Plastics	
Elastomers	0,003
Total weight of materials which remain after the preliminary separation:	0,003 kg
Total weight device [kg]:	0,0198 kg

5. Installation location of parts/materials mentioned in categories 3.1 - 3.3

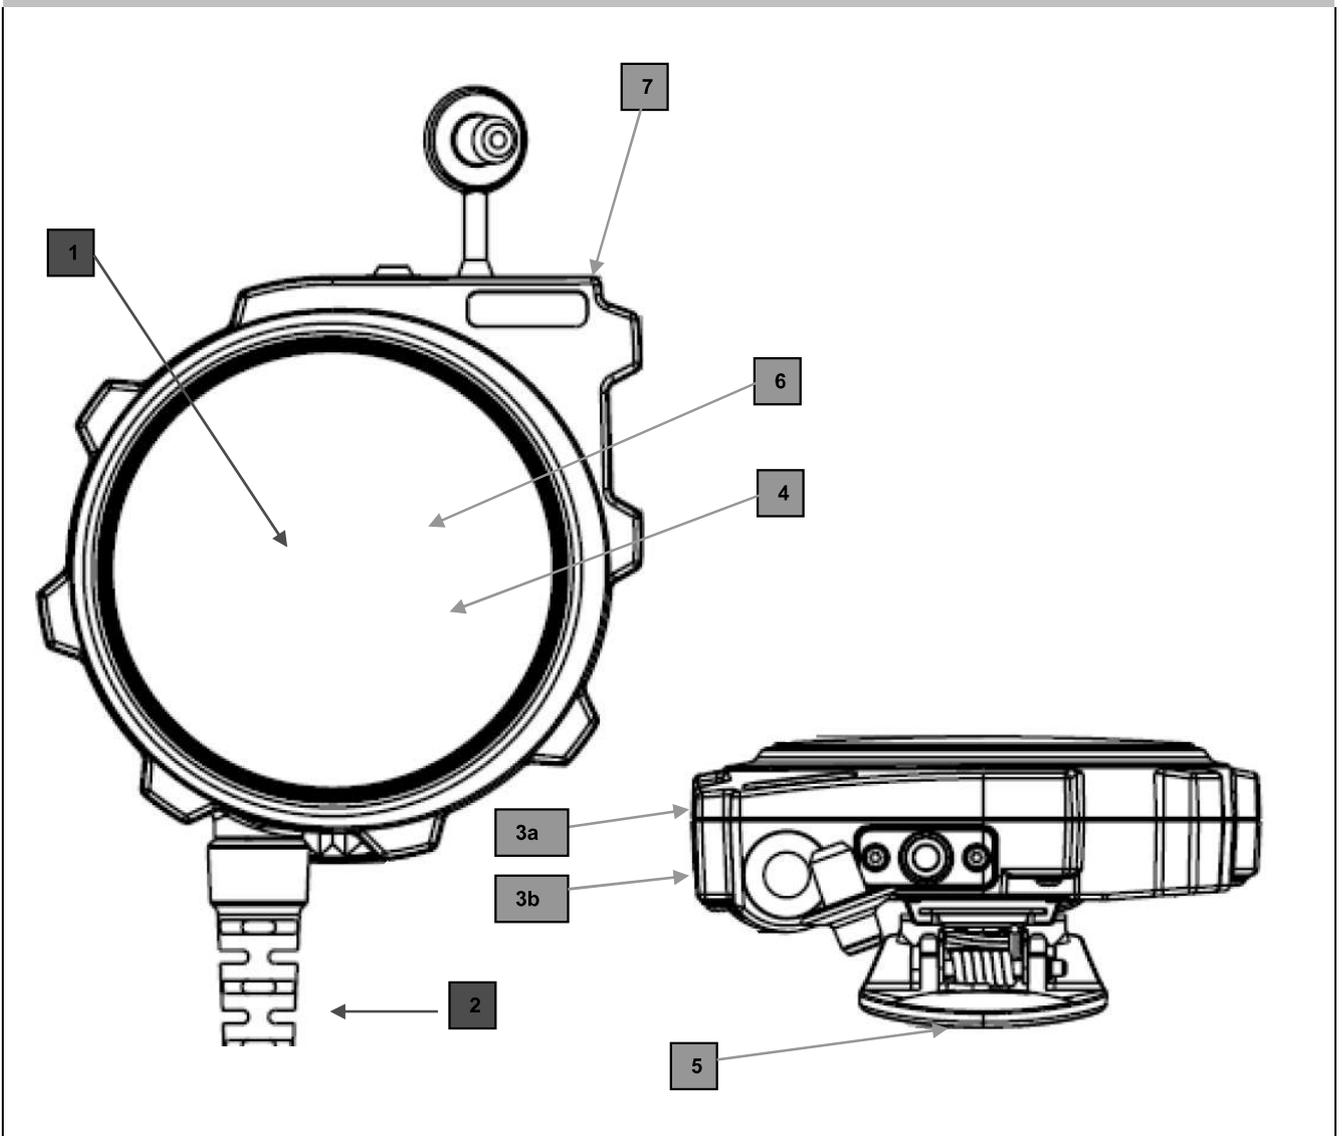

Legal disclaimer:

Every effort has been made to provide accurate information at the date of publication of this document. It is provided for information only. Dräger Medical therefore does not assume any legal warranty for any error or any consequences which may arise from the use of this information.